

F7304N / F7404N ROBOTS OPERATING MANUAL



15 Corporate Drive, Suite E - Wayne - NJ.07470 - USA
Tel: 1(201) 796-1477 • E-mail: info@fisnar.com
www.fisnar.com

THIS PAGE INTENTIONALLY LEFT BLANK

Table of Contents

SECTION 1: Introduction 6

1 Safety Precautions 7

2 Package Contents 8

3 Connector and Switch Locations 9

 3.1 Front View 9

 3.2 Rear View 9

SECTION 2: Setup 10

1 Unpacking the Robot 11

2 Setup 11

3 Tool Tip Alignment Function 14

SECTION 3: Teaching Overview 17

1 Teaching Overview 18

2 Using the Teach Pendant 21

 2.1 Key Selection 21

 2.2 Key Assignments 22

 2.3 Navigation Menu 23

 2.4 Jogging 23

 2.5 Data Entry 23

 2.6 Running a Program 23

3 Teach Box Key Assignments 24

4 Point Type & Function Summary 28

 4.1 Point Menu 28

 4.2 Setup Menu 30

 4.3 Menu 1 32

 4.4 Utility Menu 33

 4.5 Menu 2 34

SECTION 4: Programming Example 35

1 Programming Example 36

2 Good Programming Practices 39

3 Editing a Program 39

 3.1 Changing a Point’s XYZ location 40

 3.2 Insert / Delete an Instruction 40

4 Changing the Program Number 40

5 Changing from Teach Mode to Run Mode 41

SECTION 5: Point Type & Function Reference 42

1 Point Menu 43

1.1	Dispense Dot.....	43
1.2	Line Start.....	43
1.3	Line Passing.....	44
1.4	Circle.....	44
1.5	Arc Point.....	44
1.6	Line End.....	45
1.7	End Program.....	45
1.8	Dispense ON / OFF.....	45
1.9	Goto Address.....	46
1.10	Step & Repeat X.....	46
1.11	Step & Repeat Y.....	50
1.12	Brush Area.....	51
1.13	Call Subroutine.....	57
1.14	Call Program.....	58
1.15	Call Job.....	58
1.16	Set I/O.....	58
1.17	Wait Point.....	59
1.18	Stop Point.....	59
1.19	Home Point.....	59
1.20	Loop Address.....	59
1.21	Dummy Point.....	60
1.22	Initialize.....	60
1.23	Label.....	60
2	Setup Menu.....	61
2.1	Line Speed.....	61
2.2	Line Dispense Setup.....	61
2.3	Point Dispense Setup.....	63
2.4	Dispense End Setup.....	63
2.5	Z Clearance.....	65
2.6	X/Y Move Speed.....	66
2.7	Z Move Speed.....	66
2.8	Home Position.....	67
2.9	Retract Setup.....	67
2.10	Adjust Position.....	70
2.11	Quickstep.....	72
2.12	Auto Purge Setup.....	72
2.13	ESTOP Output.....	72
2.14	Acceleration Setup.....	73
2.15	Pause Status.....	73
3	Menu 1.....	74
3.1	Group Edit.....	74
3.2	Expand Step & Repeat.....	81
3.3	Program Name.....	82
3.4	Z Axis Limit.....	82
3.5	Initial IO.....	82
3.6	Debug Speed.....	83
3.7	Utility Menu.....	83
3.8	Run Mode.....	83
3.9	Resume Program.....	83
3.10	Jog Speed.....	83
3.11	Relocate Data.....	83
3.12	Move Z Lifting.....	84
3.13	Z Lifting Length.....	85
4	Utility Menu.....	86
4.1	Program.....	86
4.2	Memory.....	86
4.3	Relocate Data.....	86
4.4	Lock or Unlock Program.....	88
4.5	Password Setup.....	88

4.6	Cycle Counter	88
4.7	Key Beep.....	89
4.8	Test Function.....	89
4.9	USB.....	91
4.10	Remote Command.....	92
4.11	Program Capacity.....	93
5	Menu 2	94
5.1	Numerical Move	94
5.2	Save Temp Point	94
5.3	Retrieve Temp Point	94
5.4	Undo Program.....	94
5.5	Redo Program	94
5.6	Debug Program	94
5.7	Home Position.....	95
5.8	System Information.....	95
5.9	Execute Point	95
SECTION 6: Sample Programs.....		96
1	Dots, Lines and Arcs – Sample Program	97
2	Brush Area – Sample Program.....	99
3	Step & Repeat – Sample Program.....	100
4	Input / Output Signal Processing – Sample Program.....	102
SECTION 7: Error Messages and Specifications.....		104
1	Error Messages	105
1.1	Point Closed Error.....	105
1.2	Need Line Start Point	105
1.3	Need Step & Repeat	105
1.4	Unlock Program	105
1.5	Address Over Memory	106
1.6	Move Over Memory.....	106
1.7	System Error	106
2	I/O Specifications	107
2.1	Ext. Control Connector:	107
2.2	Output Signals.....	108
2.3	Input Signals	110
2.4	Input / Output Schematic	111
2.5	Input / Output Power Specifications	112
3	System Specifications.....	113
SECTION 8: Maintenance and Periodic Inspection.....		114
1	Check Cycles and Methods	115
1.1	General Consideration.....	115
1.2	Check Cycles and Points.....	115
1.3	Check Methods	116
2	Greasing Procedure	117
2.1	Grease Type and Greasing Interval	117
2.2	Accessing Parts to be Greased	117
3	Parts That Could Require Frequent Replacement.....	124

SECTION 1: Introduction

1 Safety Precautions

1.1 In order to meet the requirements of the European Community (CE) safety directives, the robot must be placed in an enclosure supplied by Fisnar Inc. distributors.

The enclosure will prevent the operator from entering the robot's work area and will generate an emergency stop signal if the enclosure's door switch is opened while the robot is running.





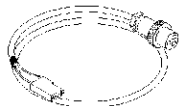
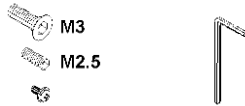
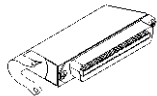
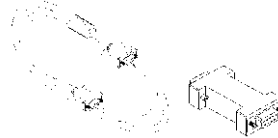

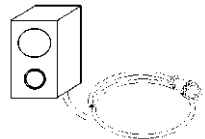
- 1.2 Make sure the robot and accessories are connected to a properly grounded power source.
- 1.3 Do not drop or spill foreign objects or material such as screws or liquids into the robot.
- 1.4 Do not touch any moving parts while the robot is running.
- 1.5 Loading and unloading of parts and material must be done when the robot is not running.
- 1.6 Changing of fixtures or tooling must be done with the power source disconnected.
- 1.7 The F7304N / F7404N robot should only be operated in an environment of 0 to 40 degrees centigrade and humidity of 20 to 95 percent with no condensation.
- 1.8 Do not store or install the robot in an area where it is exposed to direct sunlight.
- 1.9 Do not operate the robot where electrical noise is present.
- 1.10 Only use a neutral detergent for cleaning. Do not use alcohol, benzene or thinner.

NOTE:

Every drawing or photo of F7304N robot in this manual that is not accompanied by a corresponding drawing or photo of F7404N robot, is entirely applicable to this latter mentioned type robot.

2 Package Contents


In addition to this operating manual, the following items should be included with the robot:

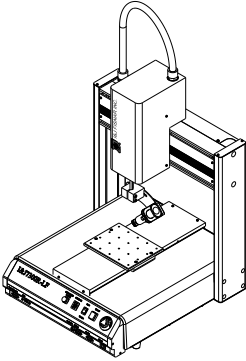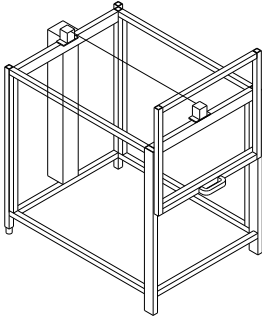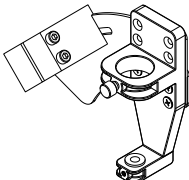 <p>Main Unit (F7304N or F7404N)</p>	 <p>Enclosure (CE Units Only – NOT INCLUDED)</p>
 <p>Barrel Holder</p>	 <p>Teach Pendant</p>
 <p>Dispenser Cable</p>	 <p>Spare Screws and Hex Key</p>
 <p>I/O Port Connector</p>	 <p>RS232 Cable and Null Modem Adapter</p>
 <p>Power Cord</p>	 <p>Start / Stop Box (optional)</p>
<ul style="list-style-type: none"> - External Control connector - Spare Control connector - Tip locator (3 pieces) - Barrel and Air Line 	


Your system may also include other optional accessories.
 If any of the above items are missing, please contact the supplier.

3 Connector and Switch Locations

3.1 Front View

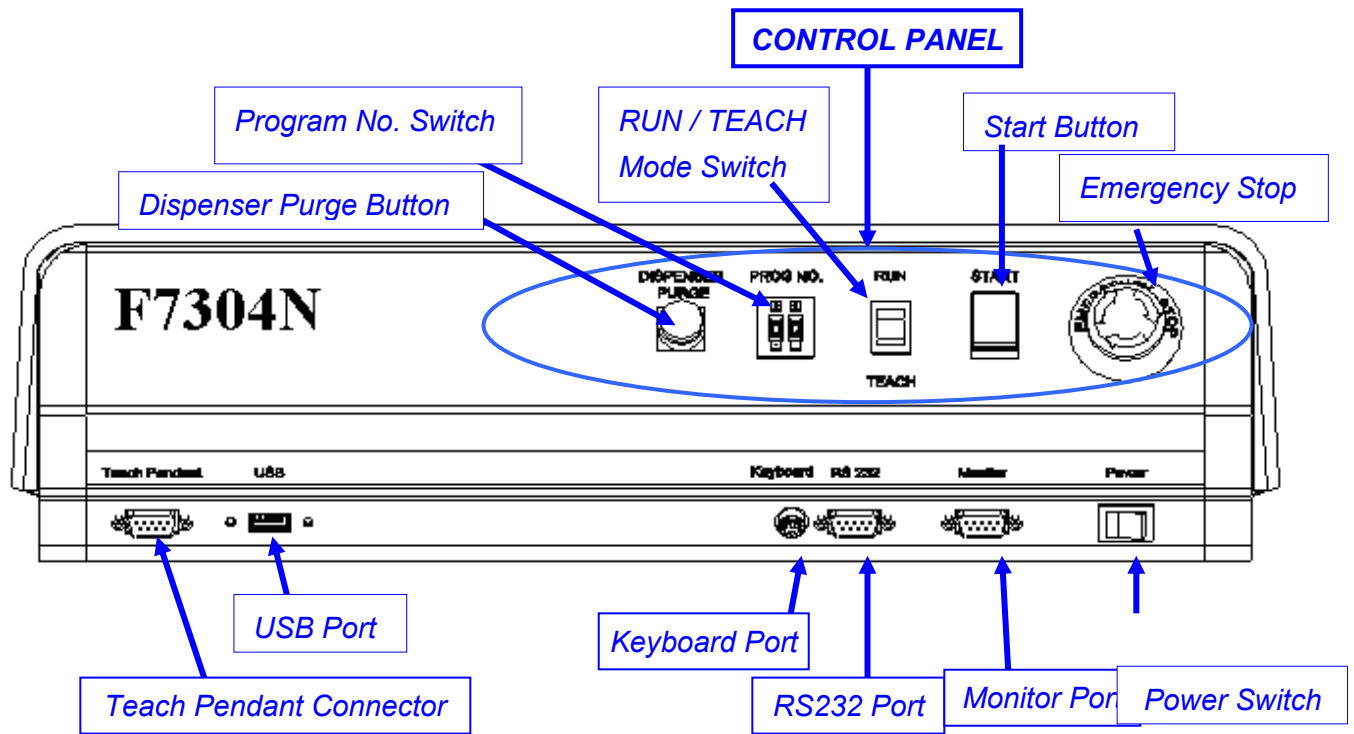

3.2 Rear View

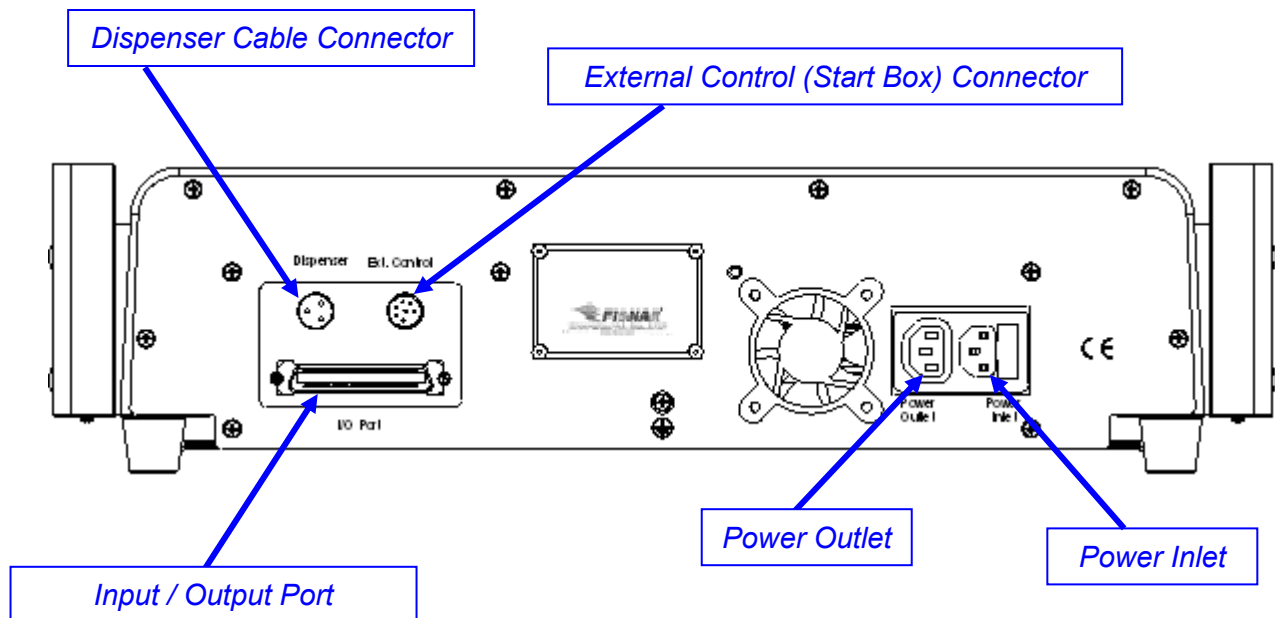

SECTION 2: Setup

1 *Unpacking the Robot*

- Unpacking the robot will require a minimum of two people. Do not attempt to lift the robot without assistance.
- Always lift the robot from the base. Never lift the robot from the cross member.
- Remove all accessories from the shipping package before attempting to remove the robot.
- Place the robot on a stable workbench.
- Do not discard the packing material as these items may be needed if the robot is shipped or moved in the future.

2 *Setup*

The F7304N / F7404N robots are available in many different configurations. The configuration of each machine and the accessories used with each system will depend on the customer's application.

The steps required to setup a system using a 30 cc or 55 cc barrel and a DSP501 dispensing controller are described below.

- 3.1. If the system is being used in the European Community, the robot must be placed in an enclosure supplied by Fisnar Inc distributors. The enclosure will prevent the operator from entering the robot's work area and will generate an emergency stop signal if the enclosure's door switch is opened while the robot is running. Connect the external start / stop box and door switch or light curtain to the Ext. Control connector on the main unit. For further information, see **SECTION 7:2.1 Ext. Control Connector**.

If an enclosure is NOT being used, the enclosure door switch can be bypassed by connecting the plug labeled SHORTED (included in the robot accessories box) to the Ext. Control Connector.

- 3.2. Standard systems are shipped with a barrel holder, which must be mounted on the Z head of the robot. The barrel holder will hold a 30 cc or 55 cc barrel on the robot's head. An optional valve holder may be used as a replacement for the barrel holder if the application so requires.
- 3.3. Mount the barrel holder or valve holder on the Z axis head. The barrel holder has several sets of mounting holes to allow it to be mounted at different heights. Choose mounting holes which give maximum work piece clearance but allow the tip to reach all areas on the work piece where dispensing is required.
- 3.4. The dispenser, such as the DSP501, is connected to the robot via the dispenser interface cable. Connect the female round connector of the dispenser interface cable to the DISPENSER connector on the robot.

Connect the small plastic connector (male foot switch plug) from the other end of the dispenser interface cable to the FOOT PEDAL connector at the back side of the dispenser.

- 3.5. Connect the male end of the barrel adapter assembly provided with the DSP501 dispenser to the air output connector on the front side of the DSP501.

Connect the barrel adapter end of the barrel adapter assembly to a 30 cc or 55 cc barrel of material. Connect the appropriate luer-lock dispensing tip to the end of the barrel. Place the barrel in the barrel holder on the robot's Z head.

Detailed instructions for setting up the DSP501 dispenser can be found in the manual provided with the DSP501.

- 3.6. For normal operation, the orange TIMER / NO TIMER switch on the DSP501 dispenser should be in the NO TIMER position (a picture of a clock with a X through it is shown).
- 3.7. Connect the Teach Pendant cable to the Teach Pendant connector on the robot.
- 3.8. Connect the power cord of the DSP501 to the back side of the dispenser. Be sure to use the correct power cord and power source for the dispenser model you are using (110 V or 220 V).

- 3.9. Connect the power cord of the F7304N / F7404N robot to the power socket on the robot. Be sure to use the correct power cord and power source for the robot model you are using (110 V or 220 V).


- 3.10. Tie back all cables and air lines so that they will not interfere with the robot's motion when the robot is operating. Be sure that the cables and air lines do not restrict the motion of the robot's head and of the robot's table and make sure that they can not become jammed as the robot moves through the work area.

3 Tool Tip Alignment Function

Tool Tip Alignment function is intended to help user to easily align the dispensing tip, mounted on the syringe, to the center of R-axis. After alignment, the tip will become the center of the R-axis and the robot will automatically compensate the X and Y coordinates, to match where the tip will point to but it will not compensate the Z-coordinate.

- The Tool Tip Alignment function must be performed prior to programming. Follow steps 1 through 6 below.
- The Tool Tip Alignment function must also be performed whenever a new tip is installed. Follow steps 1 through 14 below.

The most critical item in this process is how to align the new/replaced tip with a feature on the fixture or work-table. The operator needs to align *the center of the tip* with the feature. The R-axis must be able to rotate 360 around this feature. Ideally, the feature should be a point so the user may always align the center of the tip to this point. The Tool Tip Alignment Function should be performed in *TEACH MODE*.

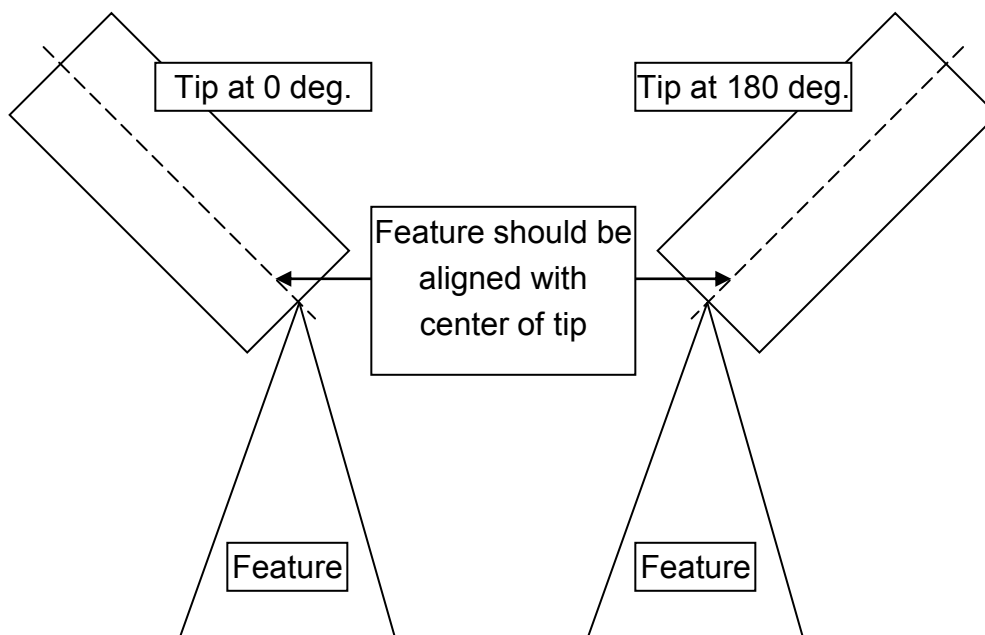

	<i>Instruction</i>	<i>Display Shows</i>
1	Send the robot to the Home position by pressing <i>Start/Home</i>	<i>Depends where in the program the instruction is executed.</i>
2	Press the <i>Setup</i> button. Select <i>Adjust Position</i> . Select <i>2. Jog Table</i> . Press ENTER .	[MESSAGE BOX] ----- Move TIP to position -----
3	Move the tip to a reference point on the worktable or a fixture using only the X,Y,Z direction. The R-axis must be left at 0-degrees. You must use the same reference point in all subsequent adjustments. See picture above for example. Press ENTER .	<i>Depends where in the program the instruction is executed.</i>
4	Press [F3] key to execute Tool Tip Alignment. The tip will move directly up and then down upon the same reference point defined in the previous step.	[MESSAGE BOX] ----- Move TIP to Point(0 deg) -----
5	Since the tip is in exactly the same position as defined in step #3, simply press ENTER . R-axis will turn 180 degree automatically.	[MESSAGE BOX] ----- Move TIP to Point(180 deg) -----
6	<u>Using only X and Y movement, jog the 180-degree tip onto the same reference point.</u> See picture above for example. Press ENTER . Screen will quickly display "Complete!"	[MESSAGE BOX] ----- Complete! -----
7	The new position of the tip may be lower (Z-direction) that the previous tip. To avoid crashing into fixture or work piece, a two-step Z-direction offset must be performed. Step one is to subtract 5mm from all Z-values	<i>Depends where in the program the instruction is executed.</i>
8	Press the MENU1 key, then 1 to select <i>Group Edit</i> . Since we want the offset on all points, simply press F1 for all points.	GROUP EDIT 1.Copy 5.Dispense Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:

	<i>Instruction</i>	<i>Display Shows</i>
9	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 6 to select <i>Offset</i> . Then press ENTER .	GROUP OFFSET ----- X Offset: 0 Y Offset: 0 Z Offset: 0 Unit: mm
10	The display will prompt the user to type the X, Y, Z offset amounts to be added to all points. We want to offset just the Z-axis. Press ENTER two times to leave the X and Y offsets at zero. Press Clear and then type -5 and press ENTER to subtract 5 mm from the Z-axis values.	GROUP OFFSET X Offset: 0 Y Offset: 0 Z Offset: -5 1.Yes 2.No Select:
11	The display will now prompt the user to confirm the change. Press 1 to select <i>Yes</i> . Then press ENTER .	<i>Depends where in the program the instruction is executed.</i>
12	The new Z-axis values are safe enough so that the new tip will not crash into the work piece or fixture. Now the user must bring the tip down to the proper height. Press the MENU1 key, then 1 to select <i>Group Edit</i> . Since we want the offset on all points, simply press F1 for all points.	GROUP EDIT 1.Copy 5.Dispense Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
13	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 7 to select <i>Offset to</i> . Then press ENTER .	[MESSAGE BOX] ----- Move TIP to Dest.Point -----
14	Using only the Z button, move the tip down on the point corresponding to the correct height. Press ENTER .	<i>Depends where in the program the instruction is executed.</i>


SECTION 3: Teaching Overview

1 Teaching Overview


A program consists of a series of instructions stored in the main unit memory. Each instruction is stored in a numbered memory address. A memory address may record a point location, with an X, Y, Z and R value, and point type or it may store an instruction which sets a parameter, such as a dispensing time or line speed.

When the program is executed, the robot will step through each memory address in sequence and execute the instruction found there. If the memory address contains a point location, the robot will move the X, Y, and Z axes to that location and also will execute the rotation corresponding to the value of the R in that point. Depending on the type of point registered at that location, the robot may also perform other functions, such as turn the dispenser on or off.

The most commonly used point types are: Dispense Dot, Line Start, Line Passing, Arc Point, and Line End.

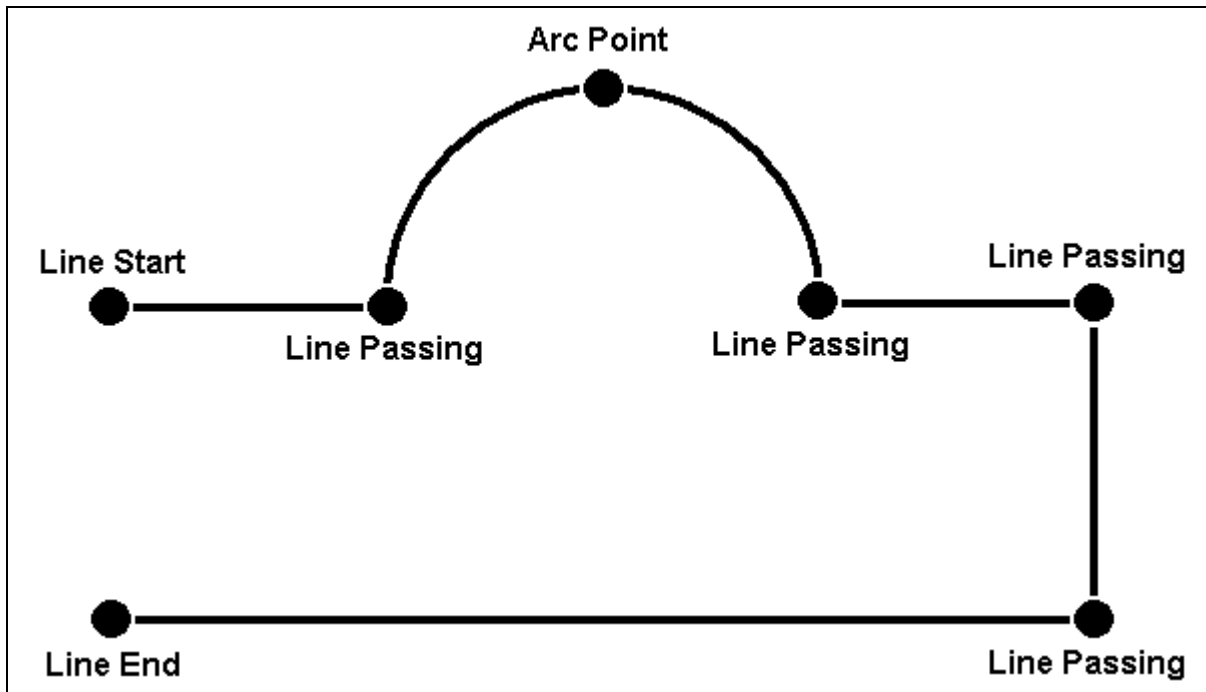


To program the robot to dispense a „dot“ of material, the dispensing tip must be jogged to the desired XYZ location (and in the desired R position of the tip), then that location is registered as a DISPENSE DOT point type by pressing the appropriate keys on the Teach Pendant.

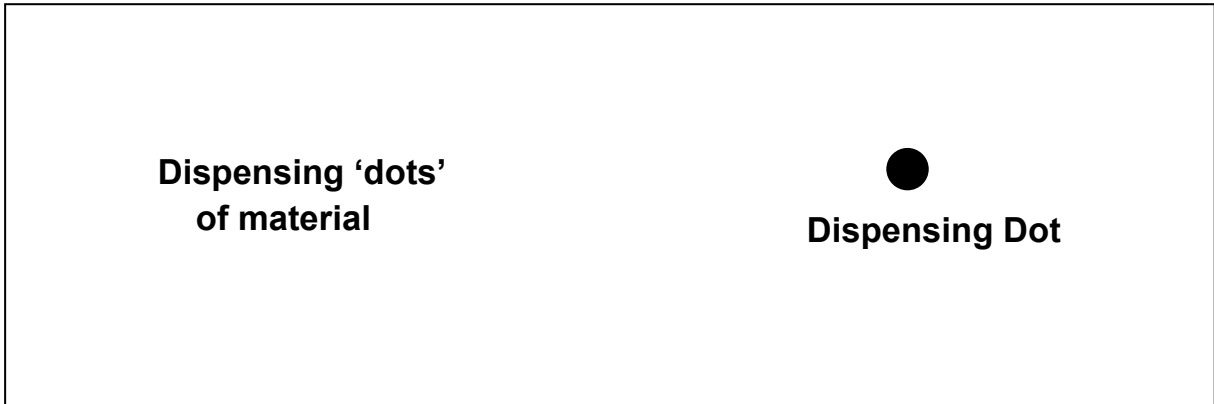


To program the robot to dispense a bead of material along a linear path, the XYZ location (and R position of the tip) of the start of the line is registered as a LINE START point type.


The locations where the tip changes direction (and position) are registered as LINE PASSING points. The end of the line is registered as a LINE END point:

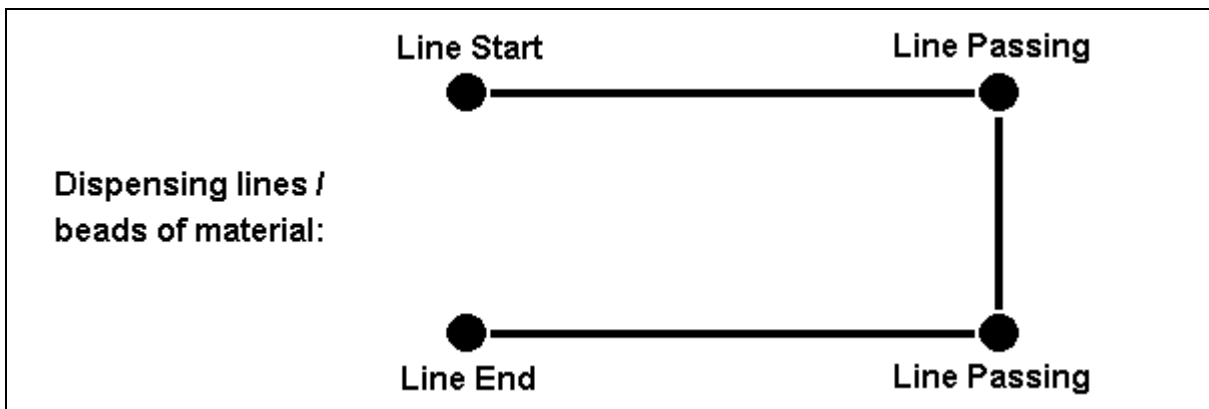

To dispense a bead of material in an arc, the XYZ location (and R position of the tip) of the start of the line is registered as a LINE START point type. The high point of the arc is registered as an ARC POINT. The end of the arc is registered as a LINE END point:

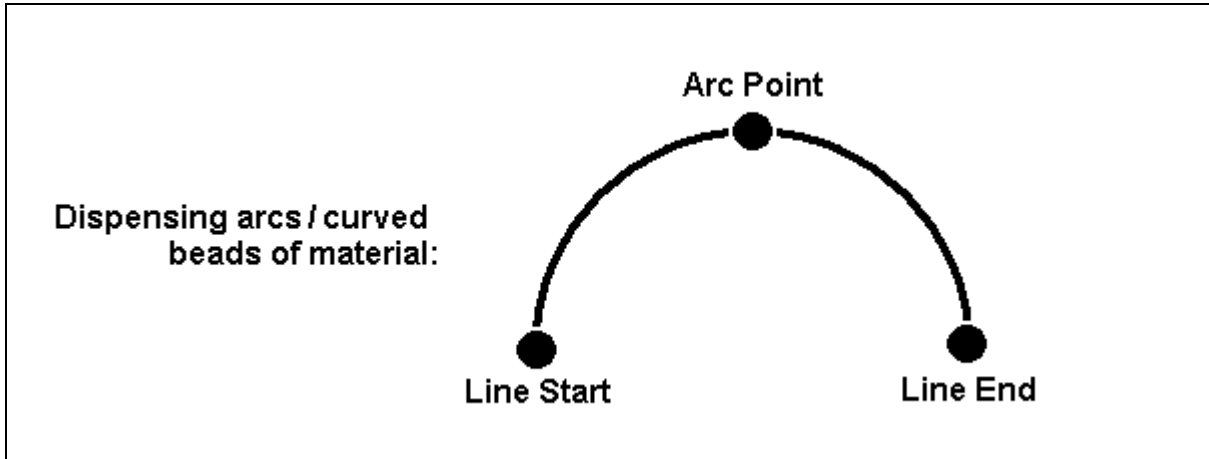


Lines and arcs can also be combined to dispense a bead of material along a complex path:

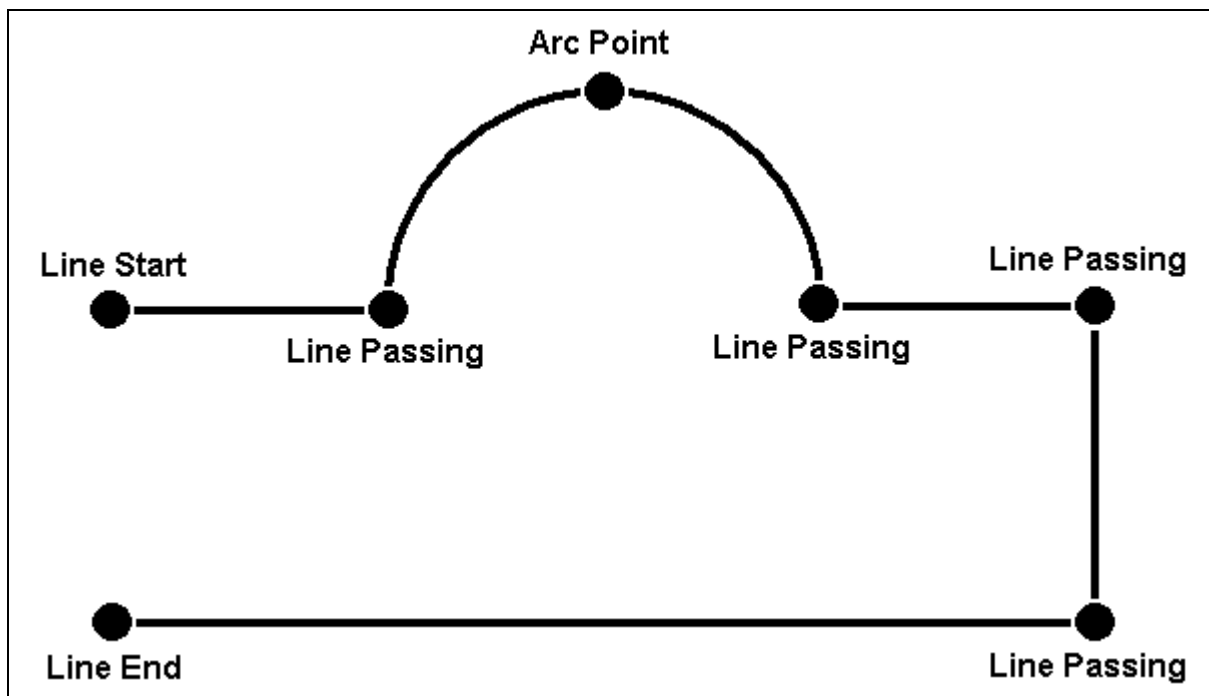

Once the required point locations for your program have been taught, the teach pendant is no longer required. The unit can be switched to RUN mode and operated using the buttons and switches on the main unit control panel.

2 Using the Teach Pendant

The teach pendant enables the user to jog robot to input program data.

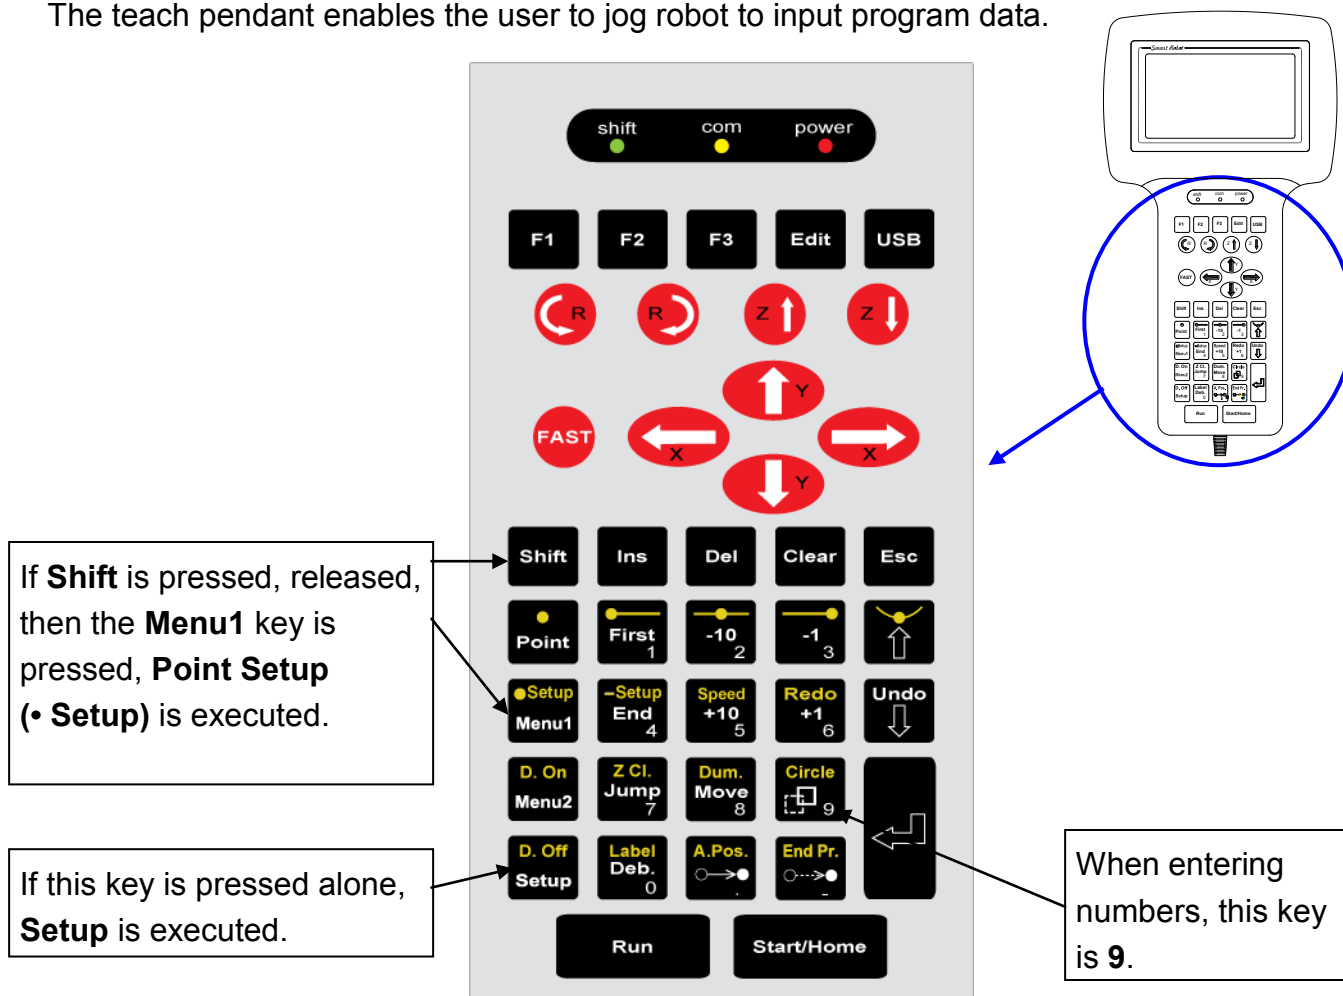
















2.1 Key Selection

There are several functions assigned to most keys on the Teach pendant. When a key is pressed alone, the function shown in the white colored area on the key is executed. For example, **MENU 1**, **MENU 2**, and **Setup** are the default key functions which are executed when that key is pressed alone.





To access the function shown in the blue area at the top of a key, press and release the **Shift** key first, then press the desired key. For example, to select the **Speed** function, press and release **Shift**, then press the **Speed** key.

When a number is required, the teach pendant will automatically switch to numeric entry mode. The number represented by each key is shown in the lower right corner of the key.



2.2 Key Assignments

Menu Keys	
	Opens the Point registration menu.
	Opens the Setup menu.
	Opens Menu # 1.
	Opens Menu # 2.
Jog Keys	
	Jogs the X axis in the left direction.
	Jogs the X axis in the right direction.
	Jogs the Y axis in the backward direction.
	Jogs the Y axis in the forward direction.
	Jogs the Z axis UP.
	Jogs the Z axis DOWN.
	Accelerates jog speed.
Navigation Display	
	Moves forward (1) memory address.
	Moves backward (1) memory address.
	Moves forward (10) memory addresses.
	Moves backward (10) memory addresses.

2.3 Navigation Menu

<p>Pressing any of the keys shown on the right will open the corresponding menu.</p>	
<p>Once the menu is open, use the up and down arrows to move through the items on the menu.</p>	
<p>Use left and right arrows to change to the next page or previous page of the menu.</p>	
<p>Press ENTER to select the current item.</p>	

2.4 Jogging
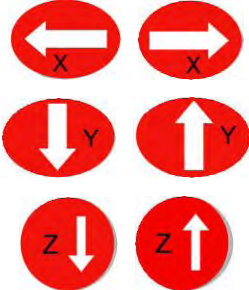
<p>The tip is jogged by pressing the jog buttons</p>	
<p>If the FAST button is pressed and held first, then one of the jog buttons is pressed, the axis will be jogged at the maximum jog speed.</p> <p>If one of the jog buttons is pressed first, then the FAST button is pressed, the jog motion will accelerate.</p> <p>If the FAST button is released, the jog motion will decelerate.</p>	
















2.5 Data Entry











 

 
 

 
If a numeric value is required, the teach pendant will automatically switch to numeric mode. Use the keys 0 – 9, (.) (,) and the minus sign (-) to enter numbers.

 














2.6 Running a Program



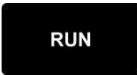








Press the  key to run the program.

3 Teach Box Key Assignments

Key	Function
	Used to select options shown on the display. The use of this key depends on the current menu displayed.
	Used to select options shown on the display. The use of this key depends on the current menu displayed.
	Used to select options shown on the display. The use of this key depends on the current menu displayed.
	Used to select options shown on the display. The use of this key depends on the current menu displayed.
	Used to select options shown on the display. The use of this key depends on the current menu displayed.
	Rotates 'R' axis clockwise.
	Rotates 'R' axis counter-clockwise.
	Jogs the Z axis UP.
	Jogs the Z axis DOWN.
	Jogs the Y axis in the forward direction.
	Jogs the Y axis in the backward direction.
	Jogs the X axis in the left direction.
	Jogs the X axis in the right direction.
	Accelerates the jog speed, when used with jog keys
	If Shift is pressed and released, then another key is pressed, the secondary function of that key (shown in blue) will be executed.

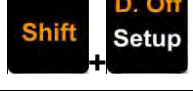Key	Function
	Inserts a memory address before the current address.
	Deletes the current memory address.
	Clears / erases the numeric value currently shown in the display.
	If pressed once, clears the current numeric value. If pressed twice, cancels the current function. If a program is running, cancels the running program. Changes from Point List display mode to single point display when teaching point data.
	Opens the Point registration menu.
	Changes the display to memory address number 1.
	Moves backward (10) memory addresses.
	Moves backward (1) memory address.
	After opening a menu, use this key to move Up inside the menu.
	Opens Menu # 1.
	Changes the display to the last memory address used in the program.
	Moves forward (10) memory addresses.
	Moves forward (1) memory address.
	After opening a menu, use this key to move Down inside the menu.
	Opens Menu # 2.
	Jumps to a specified memory address

Key	Function
	Moves the tip to the point location currently in the display.
	Registers a coordinates group offset.
	Opens the Setup menu.
	Starts debugging mode.
	Jogs the robot numerically to an absolute position
	Jogs the robot numerically to a position relative to the current location.
	(Enter)–used to confirm data entries. Also opens the Point registration menu.
	Runs the program.
	Homes the robot. Initializes all axes and moves the head to the position (0,0,0,0).
	Registers a Dispense Dot point.
	Registers a Line Start point.
	Registers a Line Passing point.
	Undo the last change to the program.
	Registers a Line End point.
	Registers an Arc Point.

Key	Function
	Re-Undo the last change which was undone (Redo)
	Registers a Point Dispense Setup command.
	Registers a Line Dispense Setup command.
	Registers a Line Speed command.
	Registers the End Program command.
	Registers a Dispense On point.
	Registers a Dispense Off point.
	Registers a Z Clearance command.
	Registers a Dummy point.
	Registers a Circle point
	Adjusts the tips position after a barrel or tip change

4 Point Type & Function Summary

4.1 Point Menu

Below is a list of Point Types, which are found under the **Enter** key (**Point** menu):

Function	Description
Dispense Dot	Registers the current XYZ location (and R position of tip) as a Dispense point for dot dispensing.
Line Start	Registers the current XYZ location (and R position of tip) as a Line Start point for line dispensing.
Line Passing	Registers the current XYZ location (and R position of tip) as a Line Passing point. This is a location on the line where the tip changes direction, such as at the corner on a rectangle.
Circle	Registers a circle with the circle center at the current XYZ location. The display will prompt the user for the circle diameter.
Arc Point	Registers the current XYZ location (and R position of tip) as an Arc point. Arc points are used to dispense material in an arc or circle.
Line End	Registers the current XYZ location (and R position of tip) as a Line End point.
End Program	Registers the current memory address as the end of the program.
Dispense ON / OFF	Registers an instruction which turns the dispenser on or off at the current location.
Goto Address	Causes the program to jump to the specified memory address.
Step & Repeat X	Registers an instruction that will re-run a selected group of memory addresses, stepping by a user-defined distance in the X or Y axis after each copy. The matrix of parts is defined by specifying the number of rows, the number of columns, the X offset and the Y offset. Step & Repeat X indicates that the robot will give priority to the X axis, running the parts along the X axis first.

Function	Description
Step & Repeat Y	Registers an instruction that will re-run a selected group of memory addresses, stepping by a user-defined distance in the X or Y axis after each copy. The matrix of parts is defined by specifying the number of rows, the number of columns, the X offset and the Y offset. Step & Repeat Y indicates that the robot will give priority to the Y axis, running the parts along the Y axis first.
Brush Area	Causes the tip to „paint“ the defined area. The painted area can be in the form of a rectangle or a circle / spiral.
Call Subroutine	Causes the machine to jump to a specified memory address and execute the instructions found there. When the end program instruction is reached, program execution will continue at address just after the call Subroutine instruction.
Call Program	Jumps to the specified program number from within the current program.
Call Job	Executes the specified job number from within the current program. Job data can be programmed from an external PC using the Windows™ Software Package.
Set I/O	Registers an instruction, which either sets the value of an output signal or checks the status of an input signal.
Wait Point	After executing the current point (Line start, Line passing, etc) the robot will wait a specified amount of time before moving to the next command.
Stop Point	After executing the current point (Line start, Line passing, etc), the robot will wait until the start button is pressed before moving to the next command.
Home Point	Registers an instruction to „home“ all axes and positions, sending them to the home position. See the Setup Menu for instructions on changing the location of the home position.
Loop Address	Causes the program to execute a group of memory addresses a user-specified number of times.
Dummy Point	Registers the current XYZ location (and R position of tip) as a Dummy point. The tip will simply pass through this point. Useful for avoiding obstacles on the work piece.
Initialize	Registers an Initialize point. Causes the robot to perform a mechanical initialization.

<i>Function</i>	<i>Description</i>
Label	Registers a label that can be used as a reference when used with the Goto address, Loop address, Set I/O, Step & repeat X, Step & repeat Y and Call Subroutine commands.
PLC	N/A
Vision Mark	N/A

4.2 Setup Menu

Below is a list of functions, which are found under the **Setup** key (**Setup** menu):

<i>Function</i>	<i>Description</i>
Line Speed	Registers the LINE SPEED used for all lines from the current memory address forward until another Line Speed instruction is found.
Line Dispense Setup	Registers the LINE DISPENSE SETUP values which sets dispensing wait time at the start of lines („head“ time), wait time at the passing points („Node“ time) and wait time at the end of lines („tail“ time). The registered values will be used from the current memory address forward until another Line Dispense Setup instruction is found.
Point Dispense Setup	Registers POINT DISPENSE SETUP values which sets dispensing time and wait time at the end of dispensing („tail“ time) for dots. The registered values will be used from the current memory address forward until another POINT DISPENSE SETUP instruction is found.
Dispense End Setup	Registers the height and speed the tip should raise at the end of dispensing. The registered values will be used from the current memory address forward until another DISPENSE END SETUP instruction is found.
Z Clearance	Registers the additional distance the tip should rise, beyond the height set in Dispense End Setup, to allow obstacles to be cleared as the tip moves from one figure to another. Values will be used until another Z Clearance instruction is found.
XY Move Speed	Sets the movement speed of the X and Y axes when moving from one figure to another in the program

<i>Function</i>	<i>Description</i>
Z Move Speed	Sets the movement speed of the Z axis when moving from one figure to another in the program
Home Position	Changes the position the robot moves to at the end of a program cycle.
Adjust Position	Registers the current location of tip as the Adjust Position. This reference point can later be used to correct the program location after the dispensing tip has been changed.
Retract Setup	Registers Retract values at the current location of tip. Retract causes the tip to move upward and backward over the dispensed bead after line dispensing.
Quickstep	Causes the robot to move very fast from one point to another, reducing the time of the dispensing cycle.
Auto Purge Setup	Automatically purges the system at the end of the program.
ESTOP Output	After receiving the emergency stop signal, ESTOP Output can modify the status of all the outputs or leave them as they were before receiving the emergency signal.
Acceleration	Parameter that controls the robot's acceleration
Pause Status	Sets the position to which the tip moves after pressing the Start button. The tip can go to the Home position or will stay at the position where the Start button was pressed.
Language	Opens MENU for selecting the language
Tip Detect Position	N/A
Tip Detect Offset	N/A

4.3 Menu 1

Below is a list of functions, which are found under the **Menu 1** key:

Function	Description
Group Edit	Allows a function to be applied to a user-defined group of memory addresses. Functions include copy, delete, move, multiply line speed, multiply dispense times, apply X Offset, apply Y Offset, apply Z Offset
Expand Step & Repeat	Expands the memory address locations which would be performed at a Step & Repeat instruction so individual memory addresses of the repeated instructions can be edited
Program Name	Allows the user to register a name for the current program number
Z Axis Limit	Sets the MAXIMUM Z axis value (the lowest tip position). Once the Z axis limit is set, the robot will prevent the tip from jogging below the set location.
Initial IO	Sets the status of the output signals when the machine is initialized
Debug Speed	Sets the speed used when running in Debug mode.
Utility Menu	Opens the Utility Menu. See SECTION 3:4.4 Utility Menu and SECTION 5:4 Utility Menu
Run Mode	Determines whether the robot operates in Standalone mode (default) or Slave mode. Slave mode allows the robot to be controlled by commands sent over the RS232 port.
Vision	N/A
Resume Program	Determines if a program will restart from point #1 or the point at which it was interrupted if a program is stopped by an emergency stop or the enclosure door switch open signal.
Jog Speed	Allows the user to set the tip jog speed for teach mode: Low, Middle or High jog speed can be selected.
Relocate Data	See SECTION 5:4.3: Relocate Data and SECTION 5:4 Utility Menu

4.4 Utility Menu

Below is a list of functions, which are found under **Menu 1 -> Utility Menu**:

Function	Description
Program	Opens the Program utility menu. Allows programs to be copied, backed up, restored, or cleared.
Memory	Opens the Memory utility menu. Allows the robot memory to be backed up, restored, or cleared.
Teach Pendant	N/A
Relocate Data	Allows the position of a program to be corrected using two reference points. Corrects for X offset, Y offset and angle of rotation.
Lock Program	Locks or unlocks a program to enable or disable program editing
Password Setup	Allows the password to be set or reset for the current program. Protects the program from unauthorized editing.
Cycle Counter	Enables or disables the program cycle counter show in the display when in run mode
PLC	N/A
Key Beep	Enabling Key Beep will produce a beep every time a key in the Teach Pendant is touched.
Test Function	N/A
USB	Allows to: load program from USB, save program to USB, update operating system from USB and backup operating system to USB

4.5 Menu 2

Below is a list of functions, which are found under the **Menu 2** key:


Function	Description
Numerical Move	Allows the tip to be positioned numerically by entering a number for the X, Y, Z and R values.
Save Temp Point	Save Temp Point saves the current XYZR position of tip in a temporary memory area numbered 1 – 9.
Retr. Temp Point	Retrieve Temp Point retrieves a XYZR position of tip which was stored with Save Temp Point.
Undo Program	Cancels the last change to the program. Returns to the program state prior to the last change.
Redo Program	Restores the last change to the program which was canceled with Undo.
Debug Program	Runs the program in Debug mode starting at the current point location.
Home Position	Causes the tip to move to the home position. The default home position is X=0, Y=0, Z=0, R=0.
System Information	Displays system information, including software version number, work area size and control board version
Execute Point	Runs a selected command.

Note: Certain functions shown on the display of the Teach Pendant are not applicable to this unit and they are marked in the manual as “N/A”.

SECTION 4: Programming Example

1 Programming Example

To help you become familiar with programming the robot, please follow the instructions below to create a program which dispenses in the following pattern:

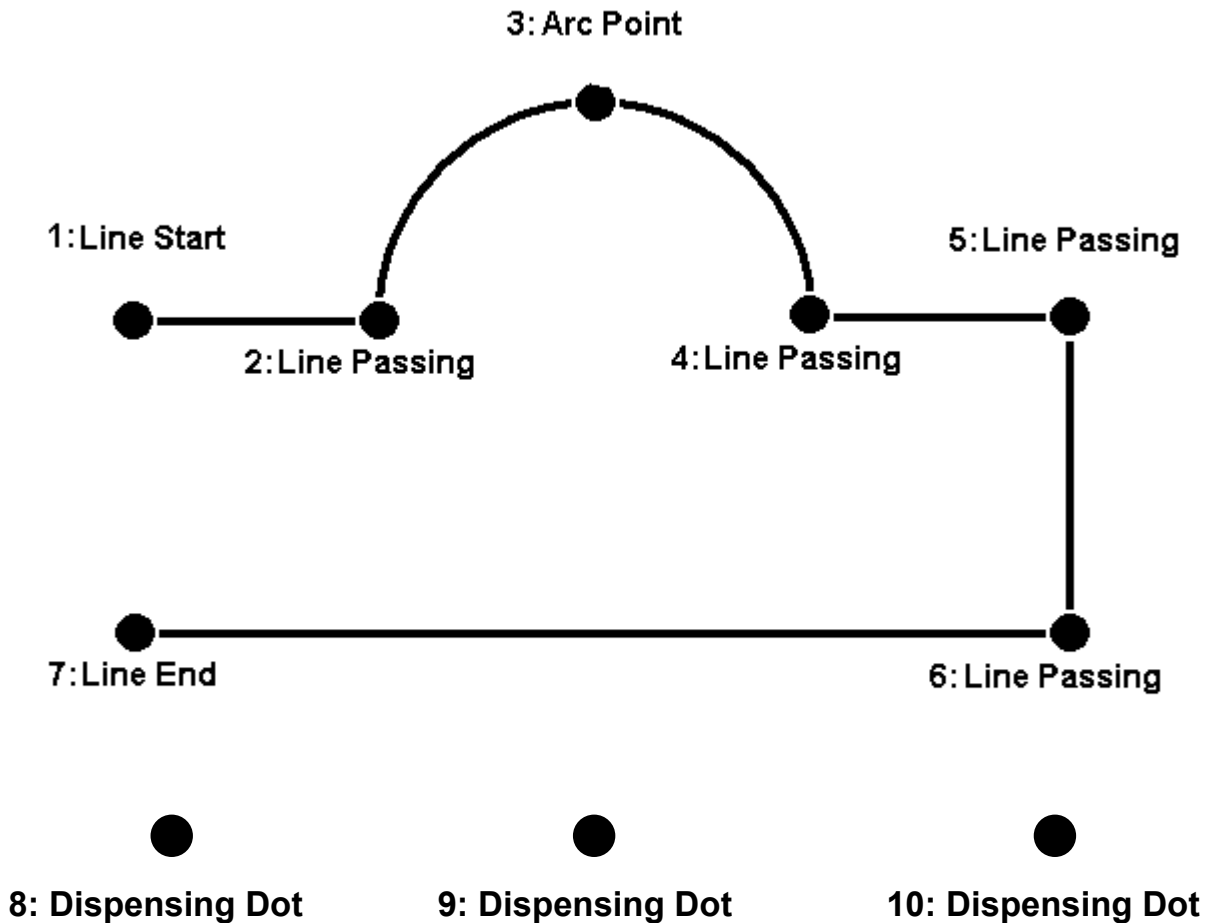

Notes:

- We will create the above program in program # 10.
- We will use a line speed of 40 mm / second for the lines and arcs in the program
- For dots, we will use a dispensing time of 0.50 seconds and a waiting time of 0.1 seconds after dispensing

	<i>Instruction</i>	<i>Display Shows</i>
1	Follow the instructions found in section SECTION 2:2. Setup to setup the robot.	
2	Select program 10 using the program number selection switches on the main unit control panel. Turn the power on.	<pre>[MACHINE HOME] +-----+ START/HOME +-----+</pre>
3	Press the START button. The robot will move to the home position.	<pre>ADDR:1 PROG:10 EMPTY X:0.00 Y:0.00 Z:0.00 R:0.00</pre>
4	Press the Setup key, then 1 to select Line Speed to register a line speed of 40 mm/second at memory address number 1.	<pre>Line Speed Setup ----- Speed: unit: mm/sec</pre>
5	The robot is now waiting for the speed to be registered. Press 40 then ENTER to register a speed of 40 mm / second.	<pre>ADDR:2 PROG:10 EMPTY</pre>
6	<p>The display shows we are at memory address 2 and that it is empty.</p> <p>Jog the dispensing tip to the first location in the diagram above (1:Line Start).</p> <p>To jog the X and Y axes, press the arrow keys (←X,X→,↑Y,↓Y).</p> <p>To jog the Z axis, press the Z↑ and Z↓ keys.</p> <p>To rotate R axis, press R keys.</p> <p>Press and hold the FAST key to jog fast. See SECTION 3:2.4 Jogging for more information.</p>	
7	Once the tip is at the correct X, Y, Z,R location for the first point (1:Line Start), press the ENTER key, then 2 to register the location as a Line Start point.	<pre>ADDR:3 PROG:10 EMPTY</pre>

	<i>Instruction</i>	<i>Display Shows</i>
8	The display will show we are at memory address 3 and it is empty. Jog the tip to the X, Y, Z location, and R position of tip, of the second point (2: Line Passing). When the location is correct, press the ENTER key, then 3 to register the location as a Line Passing point.	ADDR: 4 PROG: 10 EMPTY
9	Now jog the tip to the location of the third point (3: Arc Point). When the location is correct, press the ENTER key, then 5 to register the location as an Arc point.	ADDR: 5 PROG: 10 EMPTY
10	Jog the tip to the location of the fourth point (4: Line Passing). When the location is correct, press the ENTER key, then 3 key to register the location as a Line Passing point.	ADDR: 6 PROG: 10 EMPTY
11	Jog the tip to the location of the fifth point (5: Line Passing). When the location is correct, press the ENTER key, then 3 to register the location as a Line Passing point.	ADDR: 7 PROG: 10 EMPTY
12	Jog the tip to the location of the sixth point (6: Line Passing). When the location is correct, press the ENTER key, then 3 to register the location as a Line Passing point.	ADDR: 8 PROG: 10 EMPTY
13	Jog the tip to the location of the seventh point (7: Line End). When the location is correct, press the ENTER key, then 6 to register the location as a Line End point.	ADDR: 9 PROG: 10 EMPTY
14	The line is now complete. The next step is to register the dispense settings for the dots. Press the SETUP key, then 3 to register the dot dispensing time.	Point Dispense Setup ----- Dis. Time: Tail Time: unit: sec
15	Type 0.5 to register a dispensing time of 0.5 seconds, then press ENTER . Type 0.1 to register a waiting time after dispensing of 0.1 seconds, then press ENTER .	ADDR: 10 PROG: 10 EMPTY
16	Jog the tip to the location of first dispense dot (8: Dispense Dot). When the location is correct, press the ENTER key, then 1 to register the location as a Dispense Dot.	ADDR: 11 PROG: 10 EMPTY
17	Jog the tip to the location of second dispense dot (9: Dispense Dot). When the location is correct, press the ENTER key, then 1 to register the location as a Dispense Dot.	ADDR: 12 PROG: 10 EMPTY

	<i>Instruction</i>	<i>Display Shows</i>
18	Jog the tip to the location of third dispense dot (10: Dispense Dot). When the location is correct, press the ENTER key, then 1 to register the location as a Dispense Dot.	ADDR:13 PROG:10 EMPTY
19	The program is now complete. Press ENTER , then 7 to register address 13 as the END of the program.	ADDR:14 PROG:10 EMPTY
20	To run the program, press the RUN key..	

2 Good Programming Practices

It is recommended to register the setup commands at the beginning of every program. The following setup commands are the most used:

- Dispense End Setup
- Point Dispense Setup
- Line Dispense Setup
- Line Speed
- Z Clearance
- Retract Setup
- Adjust Position

For a complete list and description of all the different setup commands, refer to *SECTION 3:4.2 Setup Menu* and *SECTION 5:2. Setup Menu*

3 Editing a Program

You can move through the instructions in an existing program by using the following keys:

<i>Key</i>	<i>Function</i>
+1	Moves forward (1) memory address
-1	Moves backward (1) memory address
FIRST	Moves to the first memory address in the program
END	Moves to the last programmed memory address in the program
+10	Jumps forward (10) memory addresses
-10	Jumps backward (10) memory addresses
MOVE	Moves the tip to the XYZ point location, and R position of tip, of the selected point
JUMP	Jump to display the specified memory address

3.1 *Changing a Point's XYZ location*

To change the XYZ location of a point, press the **+1** or **-1** key until the point you want to change is shown in the display.

You can confirm that the correct point is in the display by pressing the **MOVE** key. This will cause the tip to move to the XYZ position shown in the display.

Now use the jog keys (**←X**, **X→**, **Y↑**, **Y↓**) and the **Z↑** / **Z↓** keys to jog the tip to the new location.

Once the location is correct, simply re-register the point as you did when it was first taught, by pressing the **ENTER** and selecting the point type. The point will be re-registered at the new location.

3.2 *Insert / Delete an Instruction*

- To insert an instruction, press the **INS** key. The point currently shown in the display will be moved forward one memory address. A new, empty memory address will be inserted at the current memory address.
- To delete the instruction currently shown in the display, press the **DEL** key, and then press the F1 (Yes) key.

4 *Changing the Program Number*

The program number is selected by the program number selection switches on the main unit's control panel.



PROG NO.

Press the **+** and **-** buttons to select the program number.

5 *Changing from Teach Mode to Run Mode*

To change from Teach mode to Run mode, change the position of the mode switch on the main unit's control panel.

When the machine is in Run mode, the teaching box is not required. Programs can be selected and run using the switches on the front control panel of the main unit.

SECTION 5: Point Type & Function Reference

1 Point Menu

Below is a list of functions which are found under the **ENTER** key. These functions are „point-type“ functions, meaning that the values applied will occupy one memory address.

Please see **SECTION 6: Sample Programs** for additional programming examples.

1.1 Dispense Dot

Registers the current XYZ location and R position of tip as a dispense point for dot dispensing.

The dispense time and wait time must be set in a previous memory address by registering a **Point Dispense Setup** instruction.

The upward motion of the tip after dispensing can be controlled by registering a **Dispense End Setup** instruction and / or a **Z Clearance** instruction in a previous memory address.

Dispense End Setup and **Z Clearance** instructions are registered using the **SETUP** key.

See also **SECTION 5:2.3 Point Dispense Setup**, **SECTION 5:2.4 Dispense End Setup** and **SECTION 5:2.5 Z Clearance**.

1.2 Line Start

Registers the current XYZ location and R position of tip as a Line Start point for line dispensing.

The line speed must be set in a previous memory address by registering a **Line Speed** instruction using the **SETUP** key.

Dispense delay times used at Line Start and Line End points can be controlled by registering a **Line Dispense Setup** instruction in a previous memory address. The **Line Dispense Setup** instruction is registered by pressing the **SETUP** key.

See also **SECTION 5:2.1 Line Speed** and **SECTION 5:2.2 Line Dispense Setup**.

1.3 Line Passing

Registers the current XYZ location and R position of the tip as a Line Passing point. This is a location on the line where the tip changes direction and position (angle), such as at the corner of a rectangle.

Also use a Line passing point before and after an Arc Point instruction.

1.4 Circle

Registers a circle, where the circle's center is at the current XYZ location. To register a circle, jog the tip to the circle's center, press **ENTER** and then press the "4" key (for: Circle). The display will prompt for the circle's diameter. Type the diameter of the circle and press **ENTER**.

The speed must be set in a previous memory address by registering a **Line Speed** instruction using the **SETUP** key.

Dispense delay times used at the start of the circle and the end of the circle can be controlled by registering a **Line Dispense Setup** instruction in a previous memory address. The **Line Dispense Setup** instruction is registered by pressing the **SETUP** key.

See also **SECTION 5:2.1 Line Speed** and **SECTION 5:2.2 Line Dispense Setup**.

The upward motion of the tip after dispensing can be controlled by registering a **Dispense End Setup** instruction and / or a **Z Clearance** instruction in a previous memory address.

Dispense End Setup and **Z Clearance** instructions are registered using the **SETUP** key.

See also SECTION 5: **SECTION 5:2.4 Dispense End Setup** and **SECTION 5:2.5 Z Clearance**.

1.5 Arc Point

Registers the current XYZ location and R position of tip as an Arc Point. Arc points are used to dispense material along an arc or circular path.

See SECTION 4: **Programming Example**, for an example of the use of an Arc Point.

1.6 Line End

Registers the current XYZ location and R position of tip as a Line End point.

The dispense delay time used at the end of the line can be controlled by registering a **Line Dispense Setup** instruction in a previous memory address. The **Line Dispense Setup** instruction is registered by pressing the **SETUP** key.

See also **SECTION 5:2.2 Line Dispense Setup**.

The upward motion of the tip after dispensing can be controlled by registering a **Dispense End Setup** instruction and / or a **Z Clearance** instruction in a previous memory address.

Dispense End Setup and **Z Clearance** instructions are registered using the **SETUP** key.

1.7 End Program

Registers the current memory address as the end of the program. The end program instruction will cause the tip to return to the home position at the end of the program cycle.

1.8 Dispense ON / OFF


The Dispense ON / OFF instruction will allow the user to program an instruction which will turn the dispenser ON or OFF.

This is useful for turning the dispenser OFF before the end of a line to prevent excess material at the line end.

Problem: Too much material at the end of the line



Solution: Turn the dispenser OFF before the end of the line

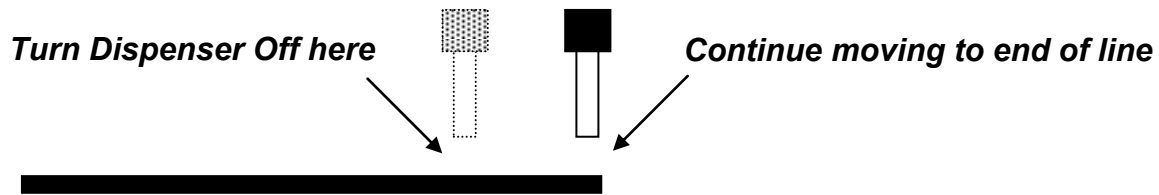

To register a DISPENSE OFF instruction, jog the tip to the location where you want the dispenser OFF, enter that location as a Line Passing point, then press the **ENTER** key and select **Dispense ON / OFF**.

Press **1** to select Dispense ON or press **2** to select Dispense OFF.

1.9 Goto Address

Causes the program to jump to the specified memory address.

 
1.10 Step & Repeat X

Step & Repeat X allows a group of instructions to be run repeatedly, stepping a given distance in the X axis or Y axis between each cycle.

Step & Repeat X is useful when a fixture is mounted on the robot which holds many identical work pieces aligned in rows and columns. The user needs only to create a program for the first work piece in the fixture, then use the Step & Repeat function to dispense to the other work pieces.

The Step& Repeat function will allow the user to define the number of rows, the number of columns, the X Offset between each part, and the Y Offset between each part.


If, for example, we have a program which dispenses four dots of material on a work piece:



The program would consist of the following eight instructions:

Address	Instruction
1	Dispense End Setup: H.Speed = 100 mm/s, L.Speed = 15 mm/s, L.Length = 5mm
2	Z Clearance: Relative 10 mm
3	Point Dispense Setup: Dis.Time = 0.25 s Tail Time = 0.10 s
4	Dispense Point
5	Dispense Point
6	Dispense Point
7	Dispense Point
8	End Program

If a fixture is made which holds (12) work pieces, in four columns by three rows:

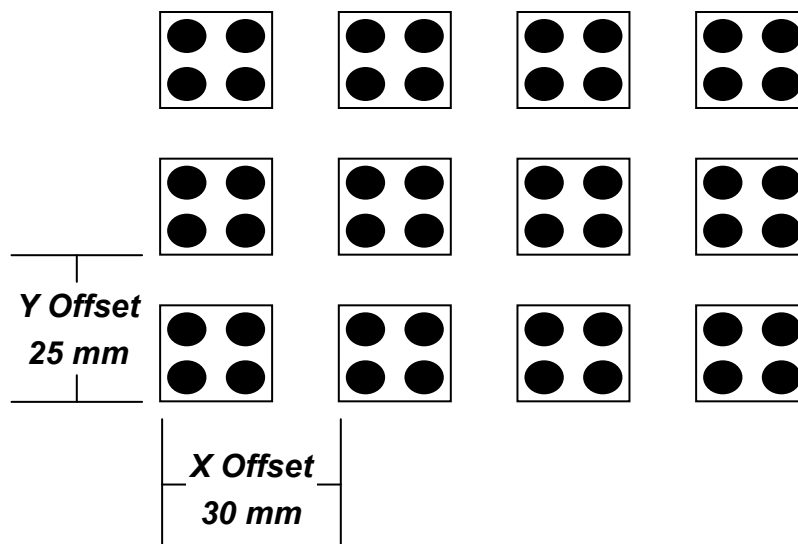


A Step & Repeat X instruction can be used to repeat the program at the additional (11) locations.

The instruction at memory address 8 should be changed from End Program to Step & Repeat X. To register a Step & Repeat X instruction at memory address 8, do the following:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the +1 or -1 keys until memory address 8 is shown in the display	ADDR:8 PROG:20 End Program
2	Press the Enter key, and then press the X→ key to change to page 2. Select Step & Repeat X , by pressing the 3 key	Step & Repeat X Columns (X) : Rows (Y) :
3	Type 4 to specify four columns, then press ENTER .	Step & Repeat X Columns (X) :4 Rows (Y) :
4	Type 3 to specify three rows, then press ENTER .	Step & Repeat X X Offset: Y Offset: Unit: mm
5	In the above example, the X Offset between parts is 30 mm. Type 30 to specify an X Offset of 30 mm, then press ENTER .	Step & Repeat X X Offset:30 Y Offset: Unit: mm
6	In the above example, the Y Offset between parts is 25 mm. Type 25 to specify 25 mm, then press ENTER .	Step & Repeat X 1. S Path 2. N Path Select:
7	The display will prompt you to select <i>1. S Path</i> or <i>2. N. Path</i> . Selecting <i>S PATH</i> will cause row 1 columns 1 to 4 to be dispensed, then row 2 column 4 to 1, then row 3 column 1 to 4. Selecting <i>N PATH</i> will cause row 1 columns 1 to 4 to be dispensed, then row 2 columns 1 to 4, then row 3 columns 1 to 4. Press 1 to select S PATH , then press ENTER	Step and Repeat X Address: [F1]Address [F2]Label

	<i>Instruction</i>	<i>Display Shows</i>
8	The display will prompt you for the <i>Start Address</i> : The start address is the memory address of the first instruction which is part of this Step & Repeat group. In our example, we want to repeat all instructions starting with memory address number 4. Type 4 to specify memory address 4, then press ENTER .	ADDR: 9 PROG20 EMPTY
9	The program is now complete. Press ENTER , then select End Program to mark address 9 as the new <i>End Program</i> instruction. Press the 7 key then press ENTER . Press RUN to run the program.	


The program will run in the following pattern and consists of the following instructions:

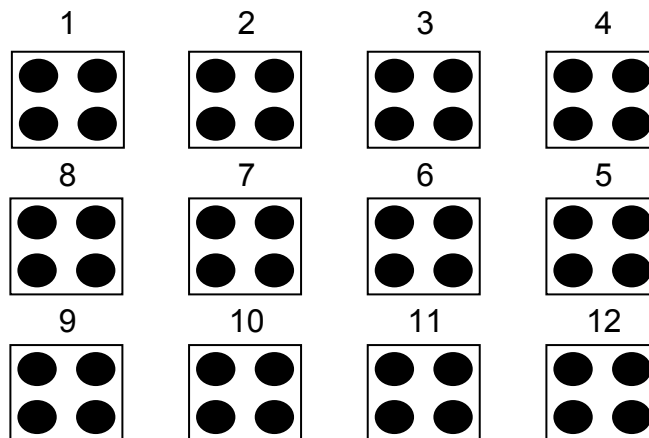

<i>Address</i>	<i>Instruction</i>
1	Dispense End Setup: H.Speed = 100 mm/s, L.Speed = 15 mm/s, L.Length = 5mm
2	Z Clearance: Relative 10 mm
3	Point Dispense Setup: Dis.Time = 0.25 s Tail Time = 0.10 s
4	Dispense Point
5	Dispense Point
6	Dispense Point
7	Dispense Point
8	Step & Repeat X: Cols: 4, Rows: 3, X Off: 30mm, Y Off: 25mm, Addr 4, S Path
9	End Program


The previous example was done using S Path. The difference between S Path and N Path is the order in which the pieces are run:

Step & Repeat X:

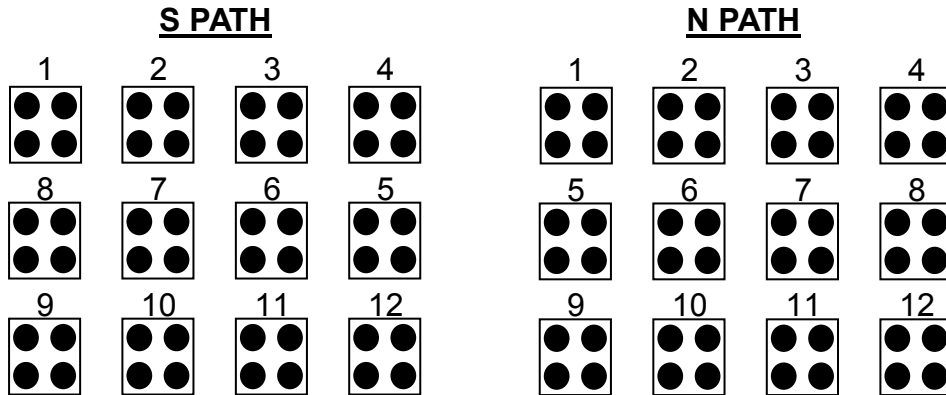

1.11 Step & Repeat Y

Step & Repeat Y works just as Step & Repeat X does, with one difference: priority is given to the Y axis instead of the X axis.

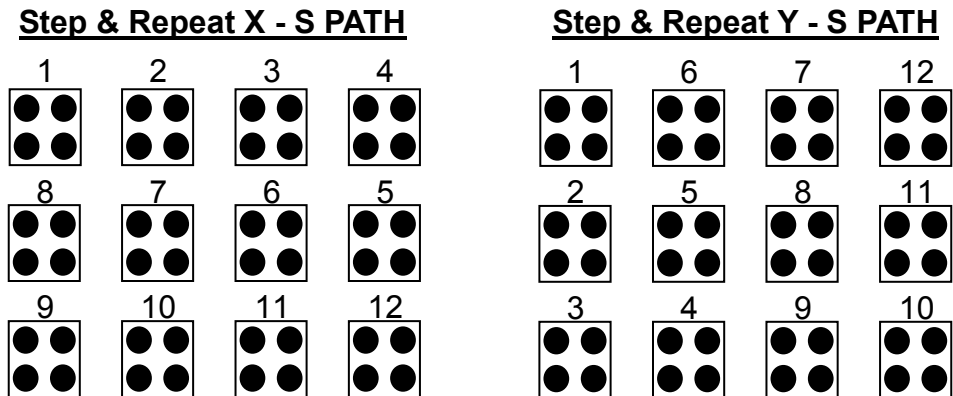

1.12 Brush Area

The Brush Area command causes the tip to „paint“ a defined area.

There are five Brush Area types: Rectangle, Rectangle 1, Rectangle band, Circle and Circle Band. The next pages provide a detailed description of all the Brush area types.


To register a *Brush Area* command, follow the instructions below.

	<i>Instruction</i>	<i>Display Shows</i>
1	Press ENTER to open the Point Menu	[POINT] 1/4 1 Dispense Dot 2.Line Start . . 7 End Program
2	Press X→, to go to page 2	[POINT] 2/4 . . 5 Brush Area 6 Call Subroutine 7 Call Program
3	Press 5 to select Brush Area.	Brush Area Setup ----- 1.Rectangle 4.Rect Band 2.Circle 5.Circle Band 3.Rectangle 1 Select:
4	Press the numeric key corresponding to the brush area type then press ENTER	Brush Area Setup ----- 1.Rectangle 4.Rect Band 2.Circle 5.Circle Band 3.Rectangle 1 Width (mm) : Band (mm) :
5	Type the width value and press ENTER . Type the band value and press ENTER . Width and band values will be explained further in this section.	


1.12.1 Brush Area: Rectangle

Brush Area rectangle causes the tip to „paint“ the defined area by passing back and forth along the X axis, while moving the Y axis a determined *Brush Width* distance after each pass along the X axis.

After registering the Brush Area Rectangle command, teach a Line Start point at the top left corner of the area to be brushed and a Line End point at the bottom right corner of that area (the tip will not dispense a straight line between these two points):

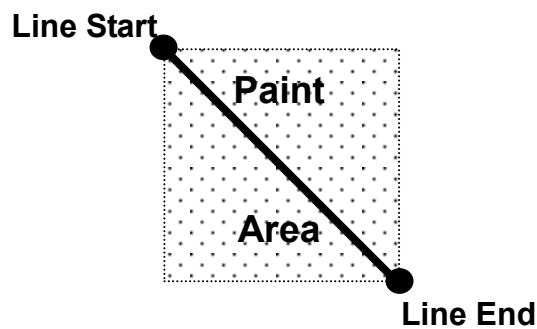


If, for example, a brush width of 5 mm was used, the tip will take the following path when the program is run:

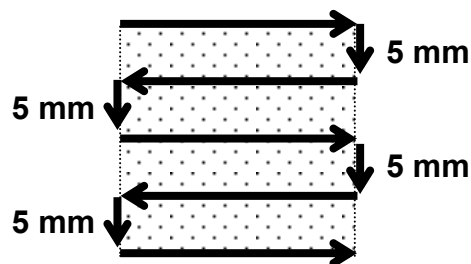


1.12.2 Brush Area: Circle

Brush Area circle causes the tip to „paint“ the defined area by following a spiral path from the outside of the circle to the center.

After registering the Brush Area Circle command, jog the tip to a point on the outside limit of the circle to be brushed and register that location as a Line Start point. Then jog the tip directly across to the center of the circle and register that location as a Line End point (the tip will not dispense a straight line between these two points):

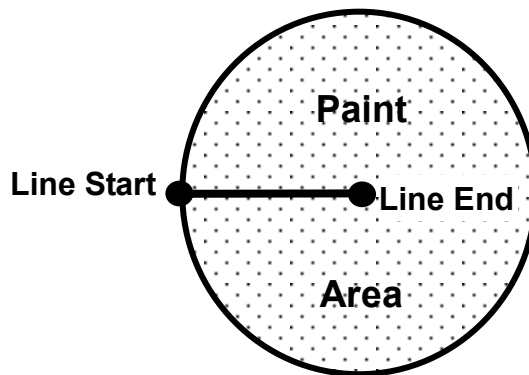


If, for example, a brush width of 5 mm was used, the tip will take the following path when the program is run:

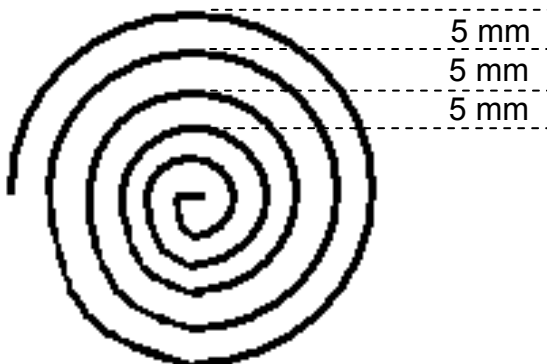


1.12.3 Brush Area: Rectangle 1

Brush Area rectangle 1 causes the tip to „paint“ the defined area by following a square spiral path from the outside of the rectangle to the center.

After registering the Brush Area Rectangle 1 command, teach a Line Start point at the top left corner of the area to be brushed and a Line End point at the bottom right corner of that area (the tip will not dispense a straight line between these two points):

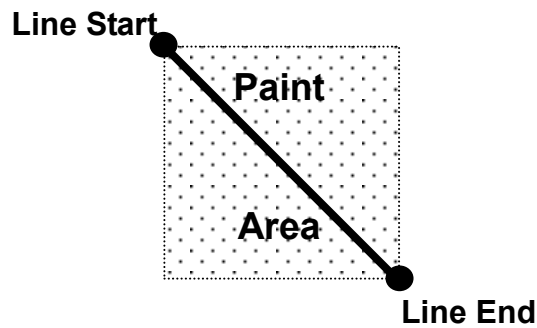


If, for example, a brush width of 5 mm was used, the tip will take the following path when the program is run:

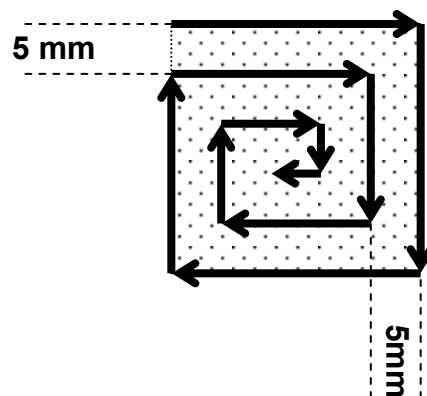


1.12.4 Brush Area: Rect Band

Brush Area Rect Band causes the tip to „paint“ a defined rectangular band area by following a square spiral path from the outside of the rectangle to the center.

After registering the Brush Area Rect Band command, teach a Line Start point at the top left corner of the area to be brushed and a Line End point at the bottom right corner of that area (the tip will not dispense a straight line between these two points):

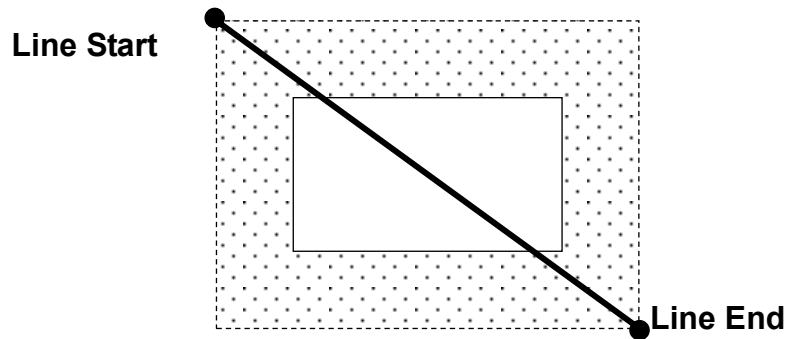


If, for example, a brush width of 5 mm and band of 15mm was used, the tip will take the following path when the program is run:

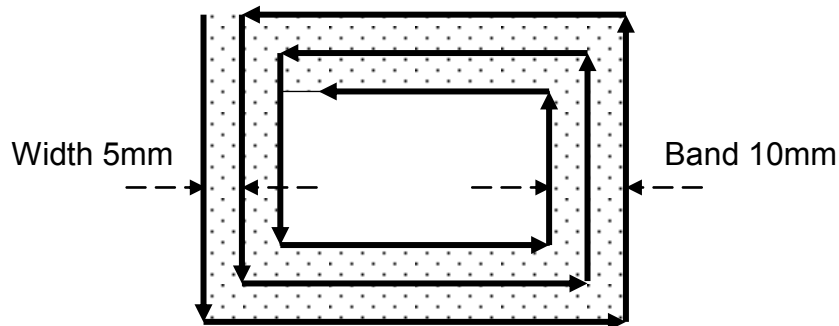


1.12.5 Brush Area: Circle Band

Brush Area Circle Band causes the tip to „paint“ a defined circular band area by following a spiral path from the outside of the circle to the center.

After registering the Brush Area Circle Band command, jog the tip to a point on the outside limit of the circle to be brushed and register that location as a Line Start point. Then jog the tip directly across to the center of the circle and register that location as a Line End point (the tip will not dispense a straight line between these two points):

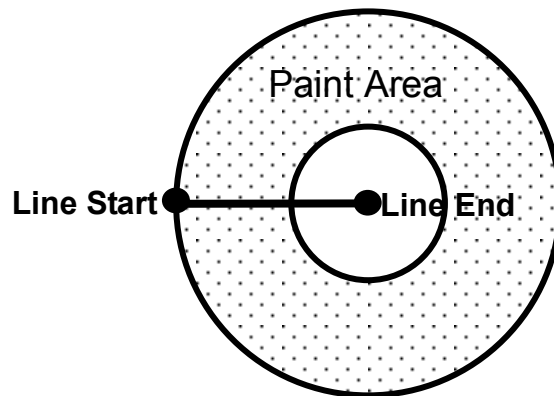

If, for example, a brush width of 5 mm and band of 15mm was used, the tip will take the following path when the program is run:

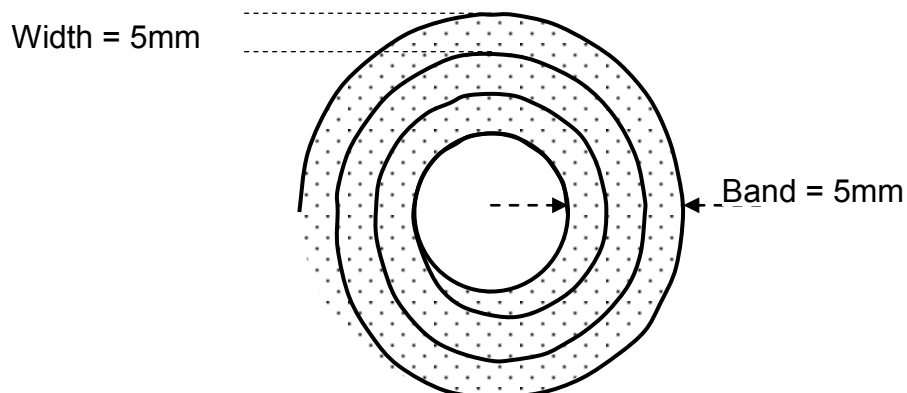


1.13 Call Subroutine

A subroutine is a set of instructions that are located after the End Program instruction. **Call Subroutine** causes the machine to jump to a specified memory address and execute the instructions found there using coordinates specified at the **Call Subroutine** instruction. When the *End Program* instruction for the subroutine is reached, program execution will continue at the address immediately after the **Call Subroutine** instruction.

The **Call Subroutine** function is most useful to repeat a pattern anywhere on the work-piece, as opposed to the *Step & Repeat* function where the pattern must be repeated in straight lines, at fixed distances from each other.

The following example illustrates the use of the *Call Subroutine* instruction. An explanation follows.

Address	Instruction
1	Line Speed = 20
2	Call Subroutine (X1,Y1,Z1,R1) address 7
3	Call Subroutine (X2,Y2,Z2,R2) address 7
4	Call Subroutine (X3,Y3,Z3,R3) address 7
5	Call Subroutine (X4,Y4,Z4,R4) address 7
6	End Program
7	Line Start (Xs,Ys,Zs,Rs)
8	Line End (Xe,Ye,Ze,Re)
9	End Program

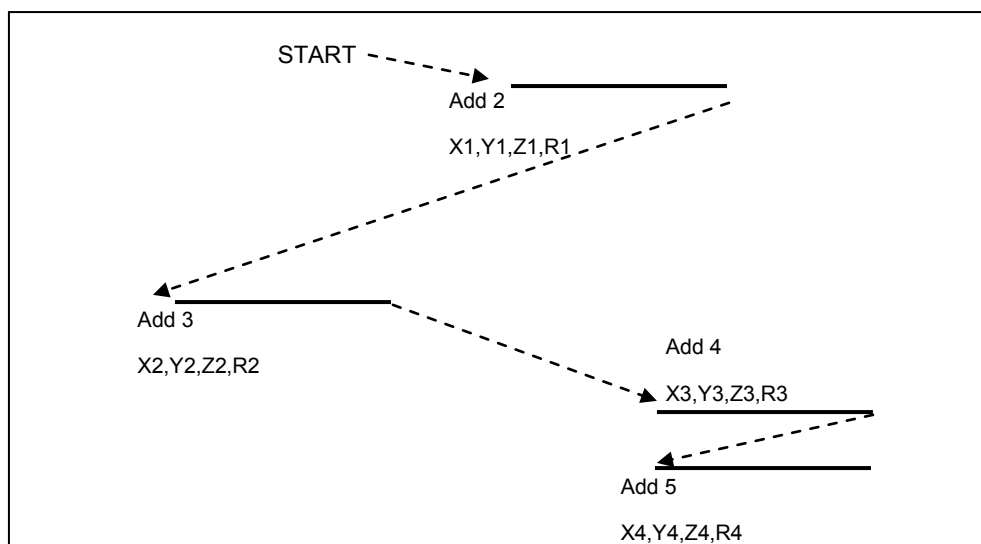

Addresses 7 and 8 comprise the subroutine that will be executed whenever it is called within the main program. The coordinates in the body of the subroutine (Xs,Ys,Zs,Rs,Xe,Ye,Ze,Re) are not important; *the critical information is the relative position to each other*. The actual work will be performed on the coordinates in the main body of the program. Before using the **Call Subroutine** instruction, the tip must be jogged to the first point where the user wants the work to occur. This point must correspond to the *relative* first point defined in the subroutine.

1.14 Call Program

Call Program will jump to the specified program number and execute the program data in the destination program until the End Program command is reached. When the destination program is executed, the robot will return to the calling program.

1.15 Call Job

Call Job will execute the specified job number from within the current program. Job data can be programmed from an external PC using the Windows™ Software Package. For more information, please see the Windows Software operation manual.

1.16 Set I/O

Set I/O registers an instruction, which either sets the value of an output signal or checks the status of an input signal.

When the Set I/O function is registered, the user is prompted to select *1. Input* or *2. Output*.

If *1. Input* is selected, the user can enter the **input Port** (input # 1 – 8), the input **Status** (1/0) and the address to **Goto** if that input status occurs. The input status is (0) when the input pin is connected to ground. The input status is (1) if the input pin is disconnected.

If *2. Output* is selected, the user can enter the output **Port** (output # 0 – 8), and whether the output should be turned **ON** or **OFF**.

Please see **SECTION 6: Sample Programs** for an example of the **Set I/O** instruction.

1.17 Wait Point

Registers a Wait Point at the current X, Y, Z location and R position of tip. When executed, the tip will move to that location and in that position and will wait for the specified period of time.

1.18 Stop Point

Registers a Stop Point at the current X, Y, Z location and R position of tip. When executed, the tip will move to that location and in that position and will wait until the start button is pressed.

1.19 Home Point

Registers an instruction to „home“ all axes, sending them to the home position. It works like a “Move” command.

It works like an “End Program” function when registered at the end of the program. After program completion, the dispensing tip moves to the home position. If used in the body of the program, the tip is moved to the home position and the next instruction is executed.

This function uses the *Home Position* coordinates (under Setup menu) if a new Home Position is made. Otherwise, it uses the default home position (X=0, Y=0, Z=0, R=0). See the Setup Menu for instructions on changing the location of the home position.

1.20 Loop Address

Registers an instruction which will execute a group of instructions a user-specified number of times.

When the **Loop Address** instruction is registered, the display will prompt for an **Address** and **Count**.

Address is the memory address to jump to from the current address. This address must be less than the current memory address.

Count is the number of times to execute the loop.

1.21 Dummy Point

Registers the current XYZ location and R position of tip as a Dummy point. The tip will simply pass through this point. A dummy point is useful for avoiding obstacles on the work piece.

1.22 Initialize

Registers an Initialize point. Causes the robot to perform a mechanical initialization. The tip will home to position (0,0,0,0) and the robot will re-find the home position using the home position sensors.

1.23 Label

Registers a label that can be used as a reference when used with the Goto, Loop address, Set I/O, Step & repeat X, Step & repeat Y and Call Subroutine commands.

Label can be used instead of Address number. A maximum of 64 labels is permitted per program; each label can have up to 8 characters.

2 Setup Menu

Below is a list of functions which are found under the **SETUP** key. These functions are all related to the setup of dispensing parameters.

2.1 Line Speed

Registers the line speed used for all lines from the current memory address forward until another Line Speed instruction is found.

2.2 Line Dispense Setup

When dispensing high viscosity materials, there is often a delay from the moment the dispenser is turned on until the material begins to flow. The following parameters are set under this function: Head Time, Tail Time, Node Time and Tail Length.

The **Head Time** setting is a delay time used at the start of line dispensing to prevent the tip from moving along the line path until the material is flowing.

The tip will move to the start of the line, turn on the dispenser and wait for the time period specified in the *head time* setting before moving. The time value can be adjusted to ensure that the material begins flowing at the same time as the line movement begins.


At the end of dispensing, a delay is often required after the dispenser is turned off, to allow the barrel pressure to equalize, before moving to the next point location. This prevents material from being „spilled“ where it is not wanted. This time delay at the end of dispensing is called the **Tail Time**.

The **Node Time** parameter enters a wait time that only affects the **Line Passing** command. Tip will pass through line passing point and will **wait at line passing point** with the dispenser **activated** for the time specified in the **Node Time**.

Usually the material continues flowing after the dispenser is off, due to pressure built in the system. **Tail Length** automatically turn off the dispenser at a user defined distance

before the end of a line, preventing excess of material to be deposited at the end of the line.

The value will be used for all lines from the current memory address forward until another **Tail Length** instruction is found.

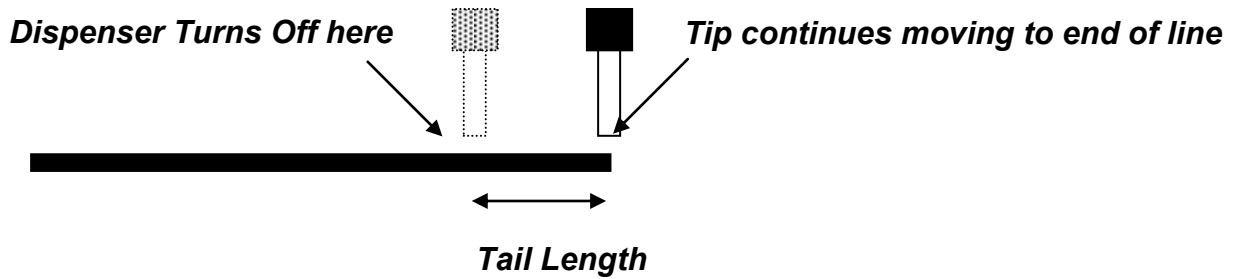

Values for the *Head Time* and *Tail Time* used when performing line dispensing are registered by pressing the **SETUP** key, then selecting **Line Dispense Setup**. The set values will be used by all lines from that memory address forward until new set of *Line Dispense Setup* values are found.

Please see **SECTION 6:Sample Programs** for an example of the *Line Dispense Setup* instruction.

2.3 *Point Dispense Setup*

Registers POINT DISPENSE SETUP values which set dispensing time and waiting time at the end of dispensing („tail“ time) for dots. The registered values will be used from the current memory address forward until another POINT DISPENSE SETUP instruction is found.

2.4 *Dispense End Setup*


Dispense End Setup allows the **L.Length**, **L. Speed** and **H. Speed** values to be registered at a memory address. These values will effect how far and how fast the tip rises after dispensing.

After dispensing a dot or line, it is often required to raise the tip a short distance at a slow speed. This allows the material to cleanly break free from the tip, without „dragging“ material where it is not wanted.

The distance and speed that the tip raises after dispensing is controlled by the **L.Length** and **L.Speed** settings.

After the tip raises the length specified by **L.Length** at the speed specified by **L.Speed**, the tip will continue rising to the **Z Clearance** height at the speed specified by **H.Speed**.

The purpose of specifying a Z Clearance height is to allow the tip to raise high enough to clear any obstacles it may encounter on the way to the next point.

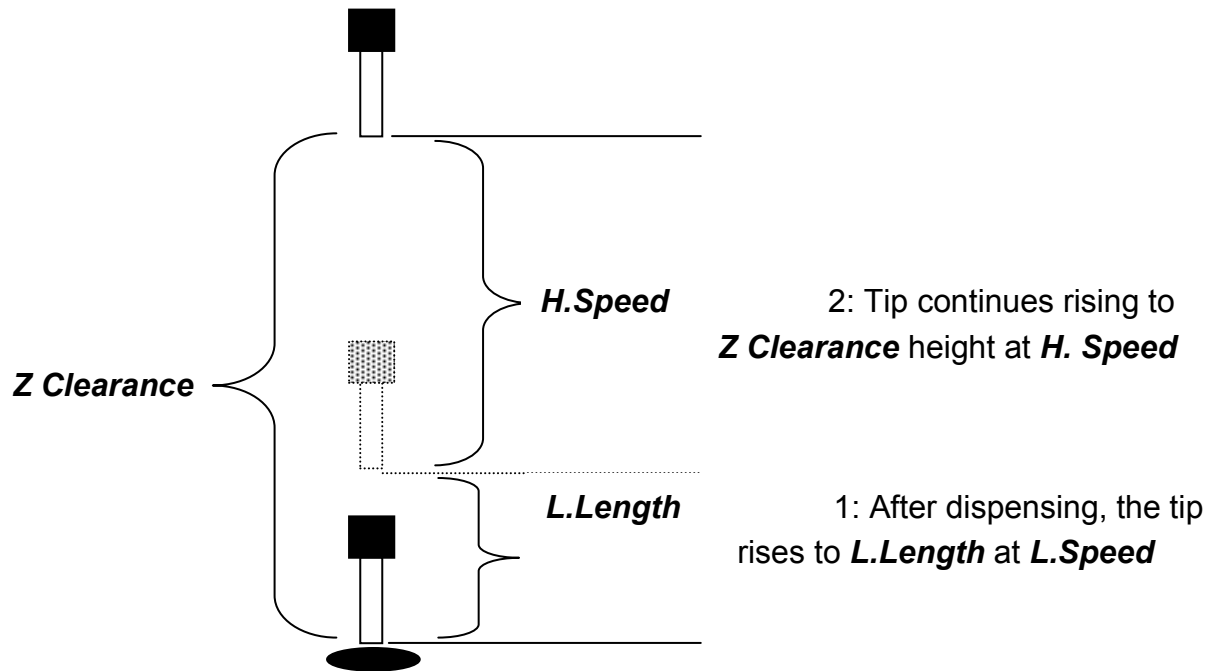

Values for *H.Speed*, *L.Speed* and *L.Length* are registered with the *Dispense End Setup* function by pressing the **SETUP** key, then choosing **Dispense End Setup**.

Once *Dispense End Setup* values have been registered at a memory address, all points after that memory address will use the values specified. If *Dispense End Setup* values are registered again, at a higher memory address, all of the points from that memory address forward will use the new values.

Please see **SECTION 6:Sample Programs** for an example of the *Dispense End Setup* instruction.


2.5 Z Clearance

The purpose of the Z Clearance function is to cause the tip to raise high enough to clear all obstacles as it moves from one point to another. If there are no obstacles between any of the program points, a small Z Clearance value, such as 5 mm, can be used to minimize the program cycle time.

Values for the Z Clearance are registered by pressing the **SETUP** key, then choosing **Z Clearance**. The Z Clearance value will be used by all points from that memory address forward until another Z Clearance value is found. Normally, a Z clearance instruction should be registered in the beginning of a program, at one of the first memory addresses.


The Z Clearance value may be specified as a relative value or an absolute value. When specified as a relative value, it is the distance to rise relative to the taught point location. When it is specified as an absolute value, it is a distance from the Z axis zero position where the tip will rise to, regardless of the Z axis value of the taught point location. For example:

Z Clearance = 10 mm RELATIVE:

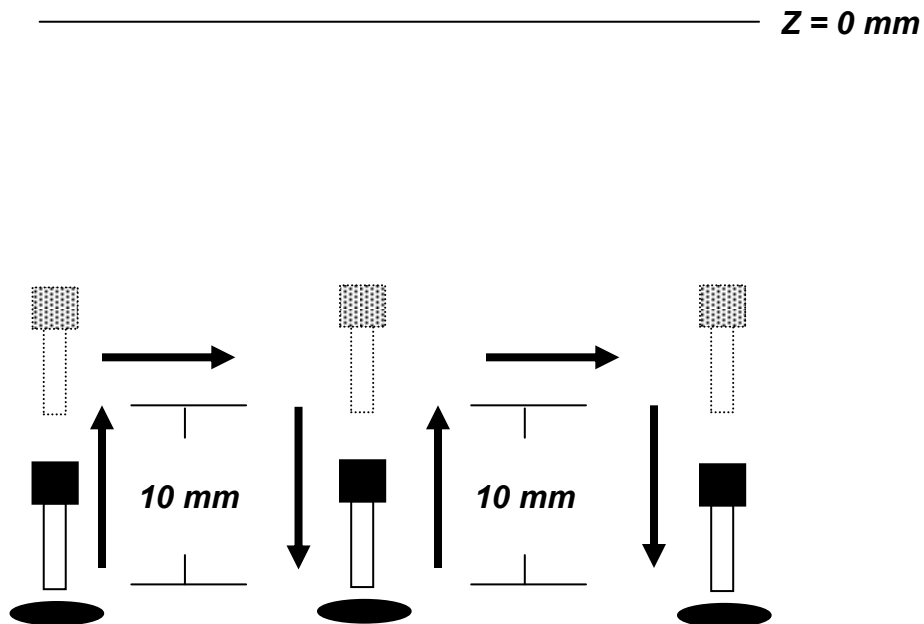

Please see **SECTION 6: Sample Programs** for an example of the Z Clearance instruction.

Z Clearance = 10 mm ABSOLUTE:

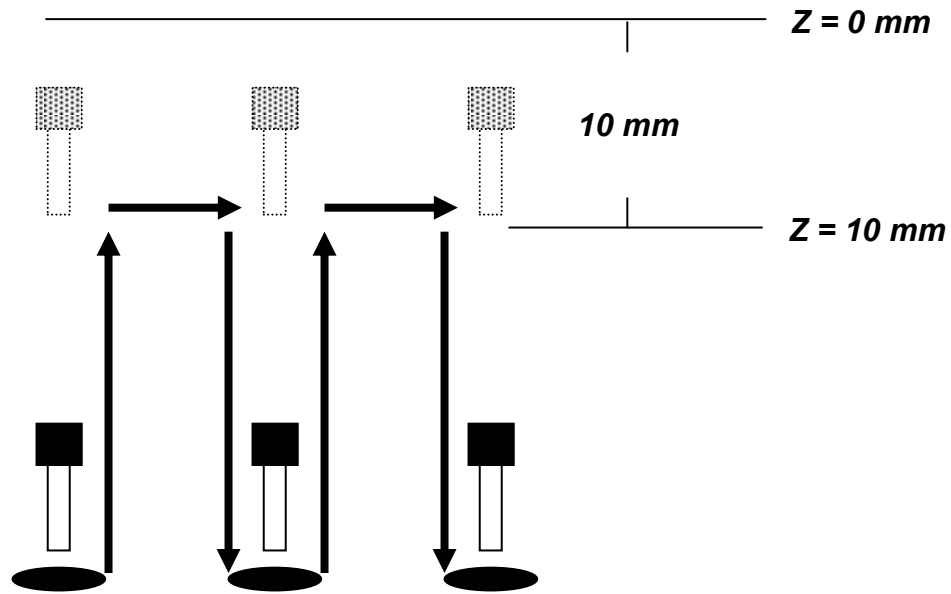

2.6 X/Y Move Speed

X/Y Move Speed sets default X and Y axis movement speed as the tip moves between figures in a program, such as from one dispense point to another or from the end of line dispensing to the next start of line dispensing.

2.7 Z Move Speed

Z Move Speed sets default Z axis movement speed as the tip moves between figures in a program, such as from one dispense point to another or from the end of line dispensing to the next start of line dispensing.

2.8 Home Position

Home Position allows the user to change the location of the program home position. The home position is the location where the tip will move to at the end of a program cycle if the “End Program” or “Home Point” instruction is registered. The default *Home Position* is (X=0, Y=0, Z=0, R=0).

To change the home position, jog the tip to the desired location for the new home position, then press **Setup** → **Home Position**.


NOTE: When executing a program in TEACH MODE, the robot will move to the mechanical home position (X=0, Y=0, Z=0, R=0) at the start of every program cycle. When executing a program in RUN MODE, the robot will move to the home position set under the Setup → Home Position.

2.9 Retract Setup


The *Retract* function gives the programmer a high level of tip control at the end of line dispensing. This is useful when dispensing high viscosity or 'stringy' materials as it will lay the material's tail down on the dispensed bead.

There are five types of the Retract Setup functions: 0 (Normal), 1(Back), 2(Square Back), 3(Forward) and 4(Square Forward).


#0: **RETRACT (NORMAL)**

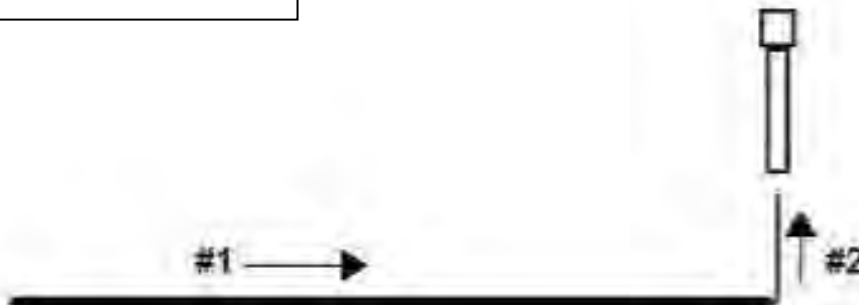


#1: RETRACT (BACK)

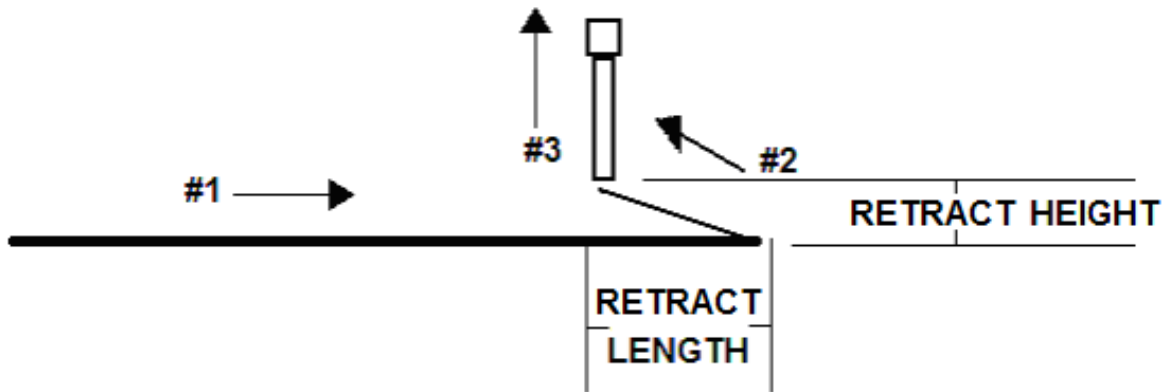


#2: RETRACT (SQUARE BACK)

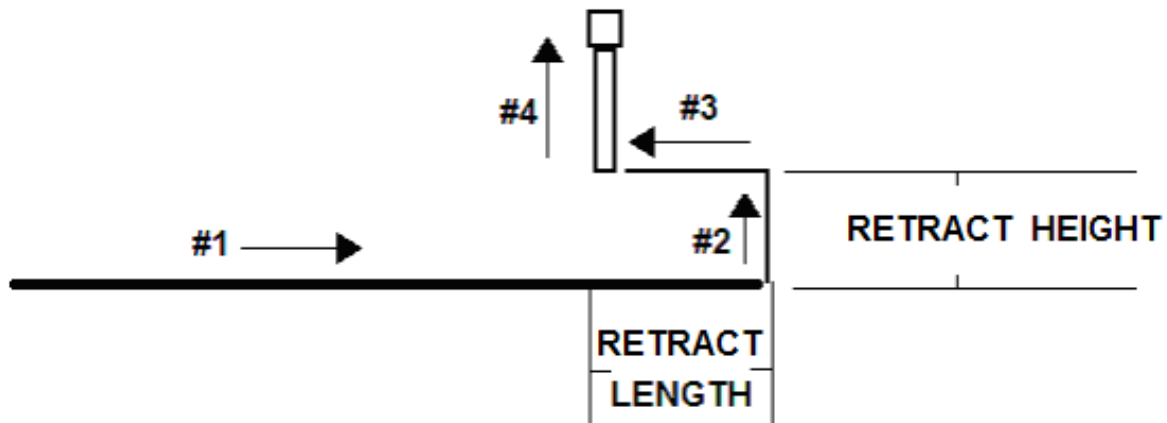

#3: RETRACT (FORWARD)

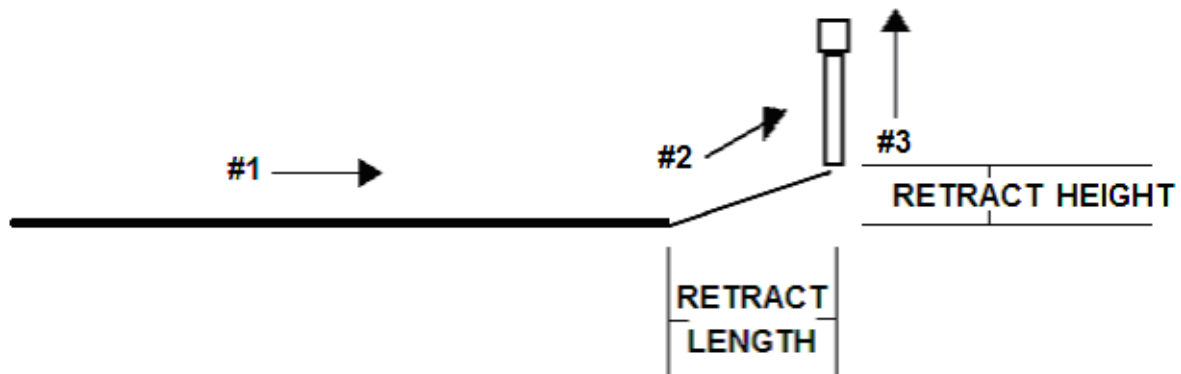

#4: RETRACT (SQUARE FORWARD)

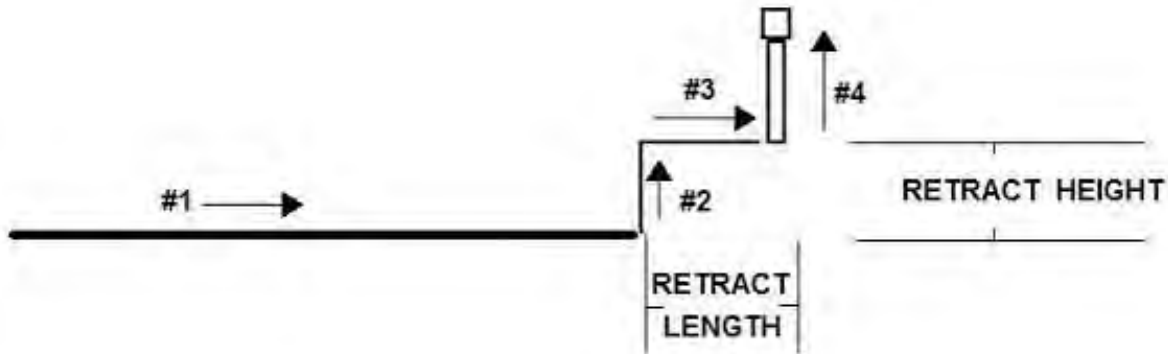

The retract function requires the following parameters:

RETRACT LENGTH: the distance to travel away from the line end point

RETRACT HEIGHT: the distance to rise as the tip moves away from the line end. This must be smaller than the value of Z-clearance in that point.

RETRACT SPEED: the speed at which to move along the retract path

RETRACT TYPE:

0. NORMAL
1. BACK
2. SQUARE BACK
3. FORWARD
4. SQUARE FORWARD

Retract values will be used for all lines from the current memory address forward until another Retract instruction is found or the function is canceled.

2.10 Adjust Position

When the dispensing barrel or tip is removed and replaced, the new tip is often in a slightly different XYZR position than the old tip was. The robot has a software utility to adjust a program's origin, thereby correcting the tip's offset problem.

A reference point should be chosen someplace on the work piece fixture or on the work piece itself. The reference point must be registered in the program data. This only needs to be done one time, such as when the program is originally created.

	<i>Instruction</i>	<i>Display Shows</i>
1	Jog the tip to the reference point (i.e. X=10, Y=20, Z=30, R=40) Or if the reference point is an existing point in your program, press the MOVE key to bring the tip to that XYZR location.	
2	Press the SETUP key, and go to page two	[SETUP] 2/3 1 Home Position 2 Adjust Position . . 7 Acceleration
	Press 2 to Select Adjust Position . The current point will be saved automatically.	Set Adjust Position ----- X:10 Y:20 Z:30 R:40

When the tip/barrel is changed, use the following procedure to adjust the program's origin for the new tip location:

	<i>Instruction</i>	<i>Display Shows</i>
	Switch the robot to RUN mode (the main unit mode switch is in the RUN position)	Counter:0 +-----+ START/HOME +-----+
1	Press the F1 key.	[Run Menu] 1/1 1. Reset Counter 2. Adjust Origin 3. Relocate Data 4. Tip Z Detect
2	Press 2 to select <i>Adjust Origin</i> .	[MESSAGE BOX] ----- Press [ENTER] Adjust Position -----
3	Press the Enter key. The tip will move to the reference point previously saved (X=10, Y=20, Z=30, R=40). If the new tip's location is slightly difference than the last tip's location, you should see that the tip is not exactly at the reference point	[MESSAGE BOX] ----- Move TIP ----- X10 Y20 Z30 R40
4	Jog the tip to the correct location for the reference point. When the location is correct, press ENTER . The program origin will be adjusted for the new tip location.	[MACHINE HOME] +-----+ START/HOME +-----+

2.11 Quickstep


Causes the robot to move very fast from one point to another reducing the time of the dispensing cycle.

2.12 Auto Purge Setup

After the end of a program, the tip will go to the home position and material will be purged in a continuous loop according to the parameters registered in the Auto Purge Setup command.

This command is very useful for two part materials that have a very short pot life.

For example, if a Wait Time of 5s and a Purge Time of 2s is registered in the Auto Purge Setup, the following chart shows the Purge pattern.

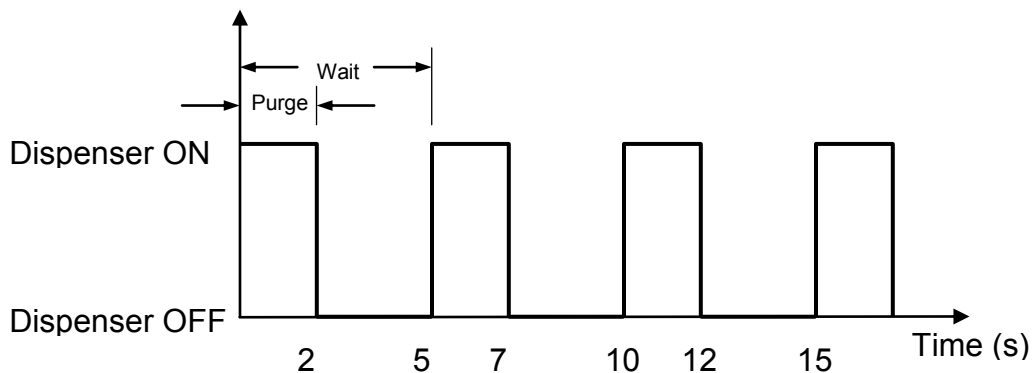

2.13 ESTOP Output

After receiving the emergency stop signal, the robot can set the status of all the outputs as:

- INITIAL: The status (On/Off) of the outputs is set as the status set by the **Initial IO** command. See Initial IO (Section 5:3.5).
- NO CHANGE: The status (On/Off) of the outputs is left as it was before the emergency signal.

2.14 Acceleration Setup

Acceleration Setup controls the acceleration of each axis. The value entered in this setting is a robot parameter and its exact relation to the robot's acceleration is beyond the scope of this manual.

In general, the value of the acceleration parameter is inversely related to the robot's acceleration. A small value will result in a high acceleration and vice versa.

Very small values can make the motors slip and can cause the driver cards to over heat.

The default value is 25 for all the axes and values lower than 15 are not recommended.

2.15 Pause Status

Pause Status sets the position to which the tip will move after pressing the Start button.

There are two options:

- Home position: The tip will move to the home position.
- Stand: The tip will stay at the position where the Start button was pressed.

3 Menu 1

3.1 Group Edit

Group Edit is a powerful utility, which allows several different functions to be applied to a user-defined group of addresses. These functions include copy, delete, move, multiply line speed, multiply dispense times, apply X Offset, apply Y Offset, and apply Z Offset.

3.1.1 Copy

For example, to use group edit to copy addresses 1 – 20 in the current program to memory address 21 - 40:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1: All F2: End
2	Type 1 then press ENTER to register 1 in <i>From</i> . Type 20 then press ENTER to register 20 in <i>To</i> .	GROUP EDIT 1-20 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 1 to select <i>Copy</i> . Then press ENTER	GROUP COPY SOURCE 1-20 Destination:1
4	The display will prompt the user to type the destination memory address where the data will be copied. Press the CLEAR key to erase the old value, then type 21 and press ENTER to select destination memory address number 21.	GROUP COPY SOURCE 1-20 Destination:21 1.Yes 2.No Select:
5	The display will now prompt the user to confirm the copy. Press 1 and then press ENTER to select Yes and perform the copy.	

3.1.2 Delete

To use group edit to delete addresses 15 – 25 in the current program:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1:All F2:End
2	Type 15 then press ENTER to register 15 in <i>From</i> . Type 25 then press ENTER to register 25 in <i>To</i> .	GROUP EDIT 15-25 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 2 to select <i>Delete</i> . Then press ENTER	GROUP DELETE 1. Yes 2.No Select:
4	The display will now prompt the user to confirm the deletion. Press 1 and then press ENTER to select <i>Yes</i> and delete the data.	

3.1.3 Move

To use group edit to move addresses 10 – 20 in the current program to memory addresses 50 – 60:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1:All F2:End
2	Type 10 then press ENTER to register 10 in <i>From</i> . Type 20 then press ENTER to register 20 in <i>To</i> .	GROUP EDIT 10-20 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 3 to select <i>Move</i> . Then press ENTER	GROUP MOVE SOURCE 10-20 Destination:1
4	The display will prompt the user to type the destination memory address where the data will be moved. Press the Clear key to erase the old value, then type 50 and press ENTER to select destination memory address number 50.	GROUP MOVE SOURCE 10-20 Destination:50 1.Yes 2.No Select:
5	The display will now prompt the user to confirm the move. Press 1 and then press ENTER to select Yes and move the data.	

3.1.4 Line SP (Line Speed)

To use group edit to increase all of the line speed commands in memory address range 1 – 200 by 20 %:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1:All F2:End
2	Type 1 then press ENTER to register 1 in <i>From</i> . Type 200 then press ENTER to register 200 in <i>To</i> .	GROUP EDIT 1-200 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 4 to select <i>Line Speed</i> . Then press ENTER .	GROUP LINE SPEED Multiple Value:
4	The display will prompt the user to type the Multiple Value to be applied to the line speeds. For example, a value of 1.2 will increase all speeds by 20%. A value of 0.8 will decrease all speeds by 20%. Type 1.2 and press ENTER to select a multiplier of 1.2.	GROUP LINE SPEED Multiple Value:1.2 1.Yes 2.No Select:
5	The display will now prompt the user to confirm the change. Press 1 to select Yes. Then press ENTER All of the line speed instructions in the select range of points will now be multiplied by 1.2.	

3.1.5 *Dispen.TM (Dispense Time)*

To use group edit to increase all of the dispensing times (Point Dispense Setup) in memory address range 1 – 200 by 15%:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1:All F2:End
2	Type 1 then press ENTER to register 1 in <i>From</i> . Type 200 then press ENTER to register 200 in <i>To</i> .	GROUP EDIT 1-200 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 5 to select <i>Dispense Time</i> . Then press ENTER	GROUP DISPENSE TM Multiple Value:
4	The display will prompt the user to type the Multiple Value to be applied to the dispense times. For example, a value of 1.15 will increase all dispense times by 15%. A value of 0.85 will decrease all dispense times by 15%. Type 1.15 and press ENTER to select a multiplier of 1.15.	GROUP DISPENSE TIME Multiple Value:1.15 1.Yes 2.No Select:
5	The display will now prompt the user to confirm the change. Press 1 to select Yes. Then press ENTER All of the Point Dispense Setup instructions in the select range of points will now be multiplied by 1.15.	

3.1.6 Offset

The Offset function allows all XYZR locations in a program to be shifted in new XYZR locations at distances (with values) defined by the user.

To use group edit to add 15 mm to all X axis values in memory address range 1 – 200:

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1:All F2:End
2	Type 1 then press ENTER to register 1 in <i>From</i> . Type 200 then press ENTER to register 200 in <i>To</i> .	GROUP EDIT 1-200 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 6 to select <i>Offset</i> . Then press ENTER	GROUP OFFSET X Offset: 0 Y Offset: 0 Z Offset: 0 R Offset: 0 Unit: mm or degrees
4	The display will prompt the user to type the X, Y, and Z offset amounts to be added to all points in address range 1 – 200. Type 15 and press ENTER to add 15 mm to the X axis values. Press ENTER two more times to leave the Y and Z offsets at zero.	GROUP OFFSET X Offset: 15 Y Offset: 0 Z Offset: 0 R Offset: 0 1.Yes 2.No Select:
5	The display will now prompt the user to confirm the change. Press 1 to select Yes. Then press ENTER 15 mm will be added to all of the X axis values in the selected range.	

3.1.7 Offset to

This function allows to be corrected automatically the offset problems which can appear when changing the tip, the barrel and/or the item to be dispensed on.


Move the tip using the original coordinates stored in program memory with the MOVE button. The next step is to jog the tip to the where it should be and the robot does all the math on all data points to align the tip/fixture with the original program

	<i>Instruction</i>	<i>Display Shows</i>
1	Press the MENU 1 key, then 1 to select <i>Group Edit</i> . The display will prompt the user to enter the starting memory address of the group to edit (From) and the ending number of the group to edit (To).	GROUP EDIT FROM:1 TO:1 (1 <-> 4000) F1:All F2:End
2	Type 1 then press ENTER to register 1 in <i>From</i> . Type 200 then press ENTER to register 200 in <i>To</i> . The <i>Group Edit</i> menu will then appear, allowing the user to select an operation to be applied to the range of points. Press 7 to select <i>Offset to</i> . Then press ENTER	GROUP EDIT 1-200 1.Copy 5.Dispen.Time 2.Delete 6.Offset 3.Move 7.Offset to 4.Line Speed Select:
3	Press Move key. The tip will move to the saved position that was recorded in the current Address. If the new tip location is slightly different from the last tip location, you should see that the tip is not exactly at the reference point.	Move New Point X: 100 Y:100 Z: 100 R:100
4	Jog the tip to the correct location for the reference point. When the location is correct, press ENT . The program origin will be adjusted for the new tip location.	Program Data Adjusted !!!

3.2 Expand Step & Repeat

Expand Step & Repeat will expand a step and repeat instruction to the actual data it represents. For example, if the following program was created:

Before:

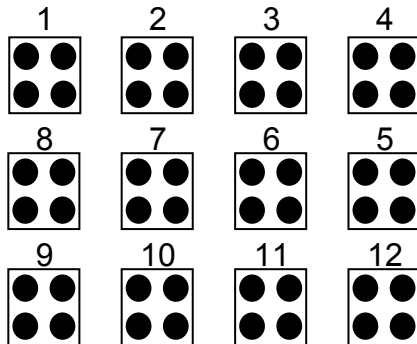


Address	Instruction
1	Dispense End Setup
2	Z Clearance
3	Point Dispense Setup
4	Dispense Point
5	Dispense Point
6	Dispense Point
7	Dispense Point
8	Step & Repeat X, Addr=4
9	End Program

The original program occupies 9 memory addresses.

If the user brings memory address number 8 into the display and then selects **MENU 1, Expand Step & Repeat**, address 8 will be expanded into the 44 points which it represents, bringing the total number of memory addresses used to 51 (plus the End Program instruction at address 52).

After:

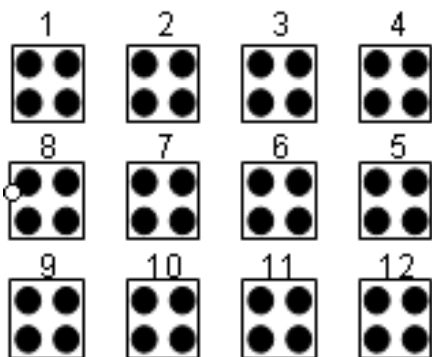

Address	Instruction
1	Dispense End Setup
2	Z Clearance
3	Point Dispense Setup
4	Dispense Point
5	Dispense Point
.	.
.	.
.	.
51	Dispense Point
52	End Program

The Expand Step & Repeat function is useful in situations where the user must edit selected elements in a Step & Repeat group, although an expanded Step & Repeat instruction will occupy more memory space than an un-expanded instruction.

3.3 Program Name

Program Name allows the user to register a name for the current program. If a program name is registered, it will appear on the display when that program is selected in Run mode.

3.4 Z Axis Limit

Z axis Limit allows the user to limit the range of the Z axis.

Use the **Z↑** and **Z↓** keys to bring the Z axis to the lowest point the Z axis should be allowed to travel (the highest Z axis numeric value), then select **Menu 1, 4. Z Axis Limit**.

The Z axis range of motion will be limited to the current value.

3.5 Initial IO

Initial IO sets the ON/OFF status of the output signals at the start of each program cycle.

Initial IO value is the decimal representation of an 8 binary bit values controlling the 8 output signals.

For example,

Decimal Value	Output Status (X = on, blank = OFF)							
	#1	#2	#3	#4	#5	#6	#7	#8
0								
1	X							
2		X						
4			X					
8				X				
16					X			
32						X		
64							X	
128								X

3.6 Debug Speed

Debug Speed allows the debug speed to be set. This speed is the speed at which the tip will move when running in Debug mode. See also **SECTION 5:5.6 Debug Program**

3.7 Utility Menu

Opens the Utility Menu. See **SECTION 5:4. Utility Menu.**

3.8 Run Mode

Determines whether the robot operates in Standalone mode (default) or Slave mode. Slave mode allows the robot to be controlled by commands send over the RS232 port. Use option 2 Slave Mode (ASCII) to connect the robot to the PC.

3.9 Resume Program

The resume setting will determine if a program restarts from point # 1 or from the point at which it was interrupted, such as the middle of a program. The default value is **2. Off**.

If Resume is set to **1. On** and a program is stopped by an emergency stop signal or enclosure door switch open signal, the program will restart from the point at which it was interrupted when the start button is pressed.

If Resume is set to **2. Off** and a program is stopped by an emergency stop signal or enclosure door switch open signal, the program will restart from point #1.

3.10 Jog Speed

The Jog Speed setting allows the user to select the jog speed for programming in Teach mode. The Jog speed can be set to Low, Middle or High speed. The default value is **2. Middle**.

3.11 Relocate Data

Allows the position of a program to be corrected, including correction for X offset, Y offset and angle of rotation.


3.12 Move Z Lifting

The Z-Lift function allows the user to move through the program from point to point without raising the Z-axis. The function also allows the user to set the distance the Z-axis will move before going to the next point.

This function is especially useful when adjusting pre-existing points which are defined but are not accessible through direct Z-axis movement. The default value is OFF.

1. Lifting Z : **ON**


When Lifting Z is on, moving the tip from point to point will require the Z-axis to rise according to the specified lifting length. If lifting length is set to zero, the tip will not do a Z-axis movement to get to the next point.

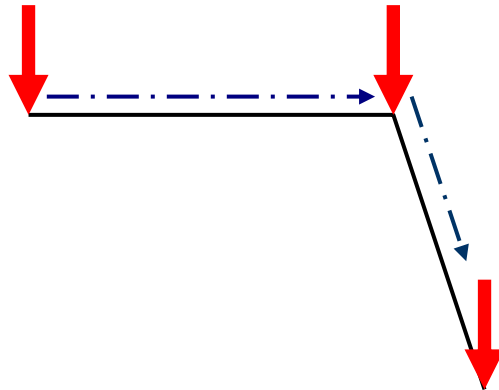

Z-axis lift is **ON** with the lifting length set to zero.

2. Lifting Z : **OFF**

When lifting Z is off, moving the tip from point to point will require the Z-axis to rise to its maximum height ($Z = 0$) before traveling the XY plane to get to the next point.

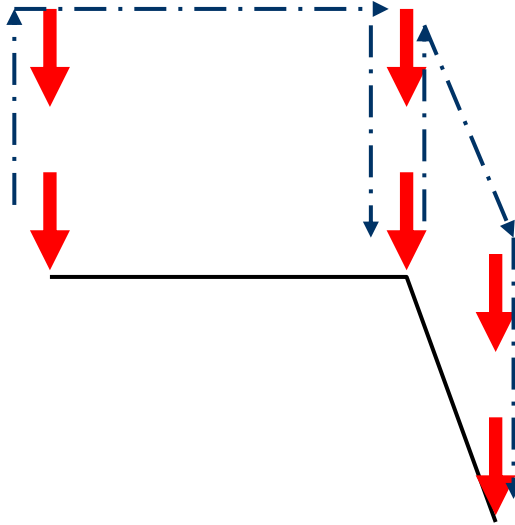

Z-axis lift is **OFF** so the tip moves to the home position first before going to the next point.

3.13 Z Lifting Length

The tip moves upward direction depending of the Z lifting length.

4 Utility Menu

4.1 Program

Opens the program utility menu. The Program Utility menu includes four options:

1. Backup	Creates a backup of the current program in reserved backup location on the memory card. A separate backup location is reserved for each program number.
2. Restore	Restores program data backed up with 1. Backup above. The current program number data is restored.
3. Clear	Erases data in the current program number.
4. Copy	Copies the current program number to a different program number.

4.2 Memory

Opens the Memory utility menu. The MASTER PASSWORD is 9999.

1. Backup	Creates a backup of the entire memory contents - all program numbers. The backup is written to a reserved location on the memory card.
2. Restore	Restores the entire contents of the robot memory backed up with 1. Backup above.
3. Clear	Erases the entire contents of the robot memory. If Clear is selected, the user will be prompted for a password.

4.3 Relocate Data

The Relocate Data function allows the position of a program to be corrected, including correction for X offset, Y offset and angle of rotation.

If, for example, the work piece fixture has been changed, the program position can be adjusted automatically for the new fixture.

The Relocate Data function requires two reference points for the calculations. Choose two point locations from your program which will be used as reference points. For example, to relocate the program after a fixture change:

	<i>Instruction</i>	<i>Display Shows</i>
1	In this example, memory address 3 is the first reference point and memory address 4 is the second reference point. Jog the tip to the new, correct position for the first reference point.	
2	Press the MENU 2 key, then select Save Temp Point to save the location. The display will prompt for the temporary point number to save.	Save temp point ----- Point(1-9): Relocate Save to 1,2 Point
3	Press 1 to save the first location in temporary position #1. Then press ENTER	
4	Jog the tip to the new, correct position for the second reference point.	
5	Press the MENU 2 key, then select Save Temp Point to save the location. The display will prompt for the temporary point number to save.	Save temp point ----- Point(1-9): Relocate save to 1,2 Point
6	Press 2 to save the second location in temporary position #2. Then press ENTER	
7	Press Menu 1 , then 7. Utility Menu , and select Relocate Data .	Relocate Program ----- 1.All Points 2.Some Points SELECT:
8	Press 1 to select <i>All Points</i> . Then press ENTER	Relocate All Point S1-> S2->
9	Type 3 and press ENTER to designate memory address number 3 as reference point 1 (temp point #1).	Relocate All Point S1->3 S2->
10	Type 4 and press ENTER to designate memory address number 4 as reference point 2 (temp point #2).	Relocate All Point S1->3 S2->4
11	The program location will be adjusted for X offset, Y offset and angle of rotation.	

4.4 Lock or Unlock Program

Lock or Unlock Program allows the user to protect a program from editing. If the program is locked, the user will not be able to change any of the program data. Unlocking the program will allow the data to be changed again.

4.5 Password Setup

Password Setup allows the password to be set or reset for the current program.

To set the password, select **MENU1, Utility Menu, Password Setup**. The user will be prompted for a **NEW PASSWORD**. Type the new password and press **ENTER**.

If the password is left blank and **ENTER** is pressed, the password will be removed. After changing or resetting the password, the robot power should be turned off.

The purpose of the password is to protect the program from unauthorized editing. The user will not be allowed to enter TEACH mode unless the correct password is entered. If the password is forgotten, the master password (8888) can be used to gain access to the program.

4.6 Cycle Counter

When in run mode, the first line of the display shows the number of program cycles which have run to completion for the current program number: [RUN MODE][X]

It is possible to reset this number by selecting **MENU1, Utility Menu, Cycle Counter**. When prompted for the **New Data:**, press **0** and **ENTER** to reset the cycle counter.

It is also possible to cause an alarm to be generated after a fixed number of program cycles. Select **MENU1, Utility Menu, Cycle Counter**. When prompted for the **New Data**, type the number of program cycles to complete before generating the alarm and press **ENTER**.

In run mode, when the set number of program cycles has been completed, the display will show **Counter Full !** and the start button will be disabled. The machine must be powered off and the Cycle Counter must be reset before the program can be run again.

4.7 Key Beep

Key Beep allows the user to set the key sound enable or disable on the Teach pendant.


4.8 Test Function

The F7000N Series robots offer the convenience of the Test Function command.

The Test Function is a diagnostic command used for troubleshooting your robot easily through the robot Teach Pendant.

Instructions

- 1) After initializing the robot, press the *Menu1* button on the Teach Pendant.
- 2) Select *Utility Menu* (see below).
- 3) Select *Test Function* (see below).

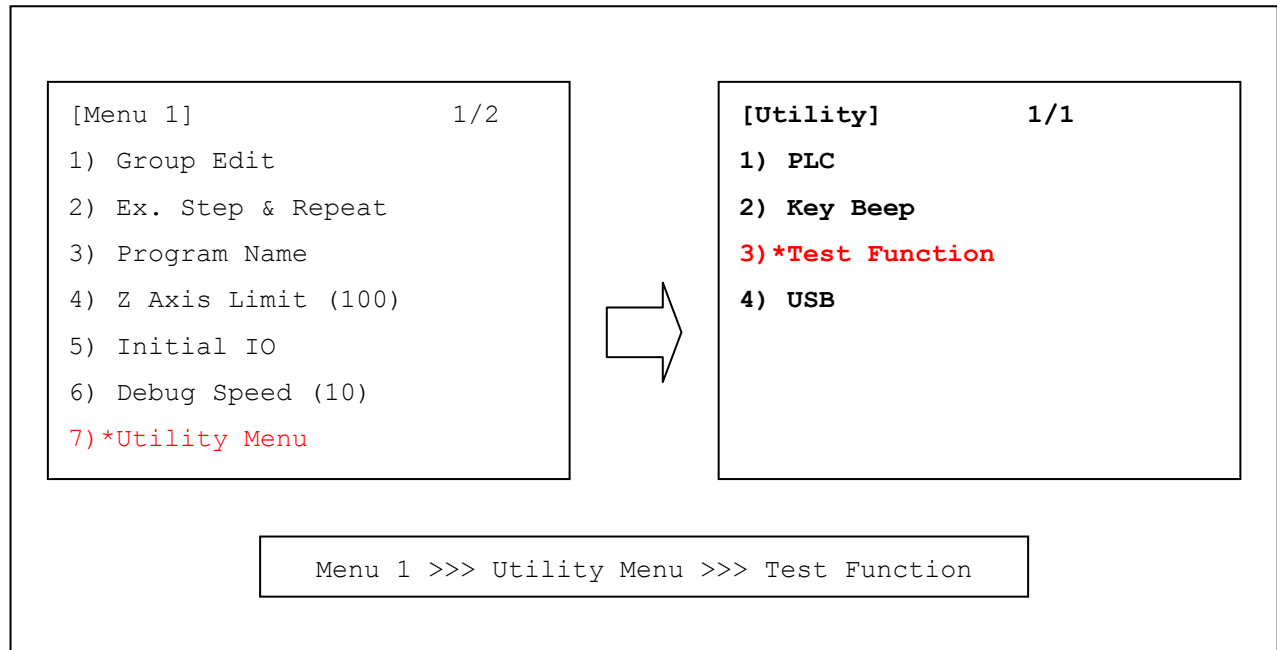

<p>Test Home Sensor Move Table by Hand</p> <p>-----</p> <p>X: 0 0 Y: 0 0 Z: 0 0</p>	<p>Teach Pad Test Press Key on Teachpad</p> <p>-----</p> <p>SCANCODE:</p>
<p>Test Front Panel Push the front panel button</p> <p>START BUTTON : 1 TEACH BUTTON : 1 EMERGENCY STOP : 0 PROGRAM NUMBER : 1</p>	<p>RS232 Test Cross RS232 Pin2 & Pin3</p> <p>-----</p> <p>Send Char:</p> <p style="text-align: center;">!!! NO RESPONSE !!!</p>
<p>IO Test</p> <p>-----</p> <p>IN: 1 1 1 1 1 1 1 1 1 OUT: 0 0 0 0 0 0 0 0 0</p> <p>Press Key 1~8 Set Output Press Key 9 Set Dispenser</p>	<p>Motor Test Table go & back (10mm)</p> <p>-----</p> <p>1. X 2. Y 3. Z</p>

4.9 USB

The F7000N Series robots offer the convenience of a Universal Serial Bus (USB) port.


With this feature, you may load or save your programs directly to and from the robot with a USB flash drive. Updating and backing up the Operating System of the robot can also be done through the USB drive.

The USB must be in the original file allocation table (FAT) format. FAT16 and FAT32 configurations will not work with the robot. Please see the instructions below.

WARNING: In order to prevent corruption or loss of data, please make sure that the robot is turned off prior to connecting and/or disconnecting the USB drive to its port.


Formatting the USB drive to FAT format¹

- 1) Double-click the *My Computer* icon on your desktop.
- 2) Right-click the USB drive you want to configure and click format.
- 3) On the *File system* drop-down box, select FAT as the file system type.
- 4) Select *Quick Format* on the Format options and then click *Start*.

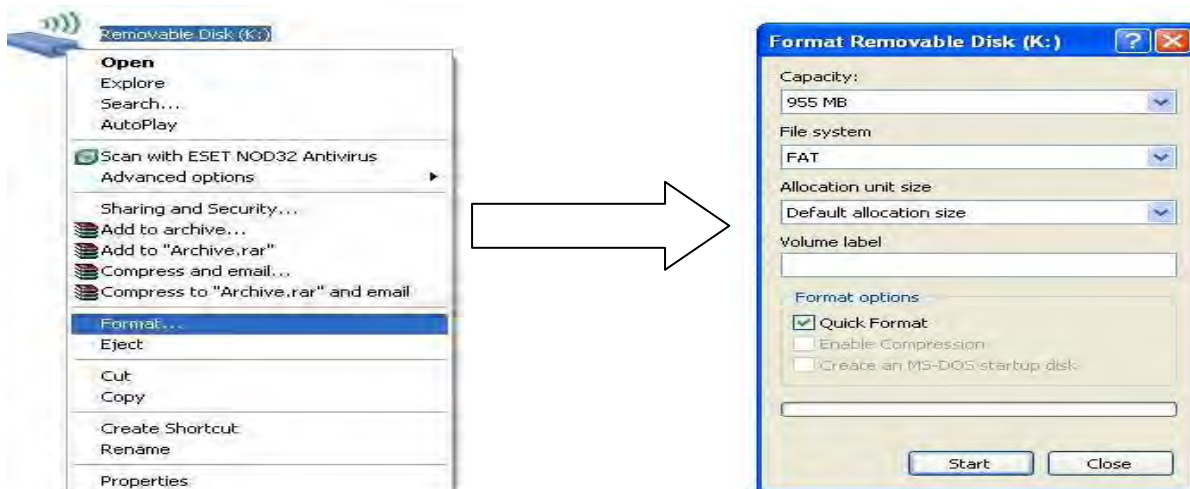

Instructions

1. Connect the USB to its port as shown above.
2. After initializing the robot, press the USB button as highlighted below.
3. The corresponding menu should appear on the teach pendant screen.

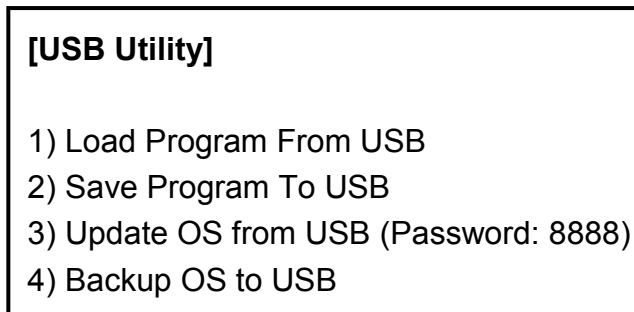

4.10 Remote Command

Remote command allows the user to call the program number from external device using the RS232 port.

For Example:

- Step1: Menu1 → Utility → RemoteCommand → Enable
- Step2: Connect the RS232 cable with Computer (or TMB200) and Dispense Robot
- Step3: In Computer, Run "C:\Program Files\Windows NT\hypertrm.exe"
Set the RS232 protocol: 115200, 8 , n ,1
- Step4: Teach Dispense Robot and Save Program In Prog 1 & Prog 2 & Prog 3.
Switch the Dispense Robot in Run Mode and Prog No. Select 01
- Step5: In HyperTerminal program. Use the follow command:
?P [enter] If successful, it will return the current program no. #1
Assign the Program Number:
P2 [enter] If successful, it will return the new program no. #2
Retry the command
?P [enter] If successful, it will return #2
Now, you can press [Start] button. And the machine will run Prog 2.

After finishing, the Prog No. will return to original program number showing in the front panel.

?P [enter] If successful, it will return the original program #1

If you want to select another program number type **?P** again.

Using the Status Command:

?S [enter]

The robot will return the current robot status.

bit0: Teach Switch Status
bit1: Start Switch Status
bit2: Machine Running Program or Standby
bit3: Emergency Status
bit4: Motor Idle or rotate
bit5: Machine Homing
bit6: Wait User Press [Start] Button
bit8 ~ 15: Front Panel Prog No.

4.11 Program Capacity

Program Capacity allows to user to set to point number in the program. If less point number is in the program number, the IPC processor is worked faster. Contrarily up to 500,000, the processor will be worked harder. The default value is set to 500 on the F7000 robot.

5 Menu 2

5.1 Numerical Move

Allows the tip to be positioned numerically by entering a number for the X, Y, Z and R values.

5.2 Save Temp Point

Save Temp Point saves the current XYZR position in a temporary memory area numbered (1 – 9). The save temp point function is also used with the Relocate Data function. See SECTION 5: **4.3 Relocate Data**.

5.3 Retrieve Temp Point

Retrieve Temp Point retrieves a XYZR position which was stored with Save Temp Point.

5.4 Undo Program

Cancels the last change to the program. Returns to the program state prior to the last change.

5.5 Redo Program

Re-does the last change to the program which was canceled with Undo.

5.6 Debug Program

Runs the program in Debug mode, using the speed set in Debug Speed starting at the current point location.

5.7 Home Position

Home Position will move the tip to the home location using either the default values (X=0, Y=0, Z=0, R=0) or the user-specified location defined in the *Setup → Home Position* command. This command cannot be used as a program instruction. It can be used during program editing to confirm the location of the home position.

5.8 System Information

System information will display the dispensing Software version currently installed in the robot.

5.9 Execute Point

Execute Point will run a selected command. Use the & keys to locate the command that you want to execute.

For example, if you select an address containing a circle, the Execute Point will cause the tip to move in a circular path.

SECTION 6: Sample Programs

1 Dots, Lines and Arcs – Sample Program

At typical program, containing dots, lines, and arcs, would appear as follows:

Addr.	Command	Notes
0001	Line Speed (50 mm/s)	Sets the line speed to 50 mm/sec
0002	Line Dispense Setup - Head Time: 0.30 sec - Tail Time: 0.25 sec - Node Time: 0.10 sec - Tail Length: 5mm	Sets a wait time of 0.30 seconds at the start of all lines to give the material time to flow before moving along the line. Sets a wait time of 0.25 seconds at the end of all lines to give the material time to stop flowing before raising the tip. Sets a wait time of 0.10 sec at line passing point with the dispenser on. Sets a length of 5mm before the end of the line when dispenser will be off.
0003	Point Dispense Setup - Dispense Time: 0.50 sec - Tail Time: 0.25 sec	Sets the dispensing time for all dots to 0.5 seconds. Sets the waiting time, after dispensing a dot, to 0.25 seconds.
0004	Dispense End Setup - H.Speed: 75 mm/sec - L.Speed: 15 mm/sec - L.Length: 10 mm	Programs the robot to rise, after dispensing dots and at the end of line dispensing. The tip will rise 10 mm (L.Length) at 15 mm/sec (L.Speed) then continue rising at 75 mm/sec (H.Speed) to the Z Clearance height.
0005	Z Clearance - 20 mm - Relative	Sets the Z Clearance value to 20 mm relative to the point location. The maximum height the tip will rise after dispensing is 20 mm above the Dot or Line End point
0006	Line Start (10, 10, 35, 10)	Registers a Line Start point at X: 10 mm, Y: 10 mm, Z: 35 mm, R=10°
0007	Line Passing (10, 20, 35, 15)	Registers a Line Passing point at X: 10 mm, Y: 20 mm, Z: 35 mm, R=15°
0008	Arc (5, 25, 35, 20)	Registers an Arc point at X: 5 mm, Y: 25 mm, Z: 35 mm, R=20°
0009	Line Passing (10, 30, 35, 25)	Registers a Line Passing point at X: 10 mm, Y: 30 mm, Z: 35 mm, R=25°

<i>Addr.</i>	<i>Command</i>	<i>Notes</i>
0010	Line End (10, 40, 35, 10)	Registers a Line End point at X: 10 mm, Y: 40 mm, Z: 35 mm, R=10°
0011	Dispense Dot (20, 20, 35, 15)	Dispenses a dot at X: 20 mm, Y: 20 mm, Z: 35 mm, R=15°
0012	Dispense Dot (20, 25, 35, 20)	Dispenses a dot at X: 20 mm, Y: 25 mm, Z: 35 mm, R=20°
0013	Dispense Dot (20, 30, 35, 25)	Dispenses a dot at X: 20 mm, Y: 30 mm, Z: 35 mm, R=25°
0014	End Program	Ends the program. Returns the tip to the home position.


2 Brush Area – Sample Program

Addr.	Command	Notes
0001	Line Speed (25 mm/s)	Sets the line speed to 25 mm/sec
0002	Line Dispense Setup - Head Time: 0.30 sec - Tail Time: 0.25 sec - Node Time: 0.10 sec - Tail Length: 5mm	Sets a wait time of 0.30 seconds at the start of all lines to give the material time to flow before moving along the line. Sets a wait time of 0.25 seconds at the end of all lines to give the material time to stop flowing before raising the tip. Sets a wait time of 0.10 sec at line passing point with the dispenser on. Sets a length of 5mm before the end of the line when dispenser will be off.
0003	Dispense End Setup - H.Speed: 75 mm/sec - L.Speed: 15 mm/sec - L.Length: 10 mm	Programs the robot to rise, after dispensing. The tip will rise 10 mm (L.Length) at 15 mm/sec (L.Speed) then continue rising at 75 mm/sec (H.Speed) to the Z Clearance height.
0004	Z Clearance - 20 mm - Relative	Sets the Z Clearance value to 20 mm relative to the point location. The maximum height the tip will rise after dispensing is 20 mm above the Line End point
0005	Brush Area - Rectangle - Brush Width: 5 mm	Sets a Rectangle area to brush with a brush width of 5 mm.
0006	Line Start (50, 10, 35, 10)	Registers a Line Start point at X: 50 mm, Y:10 mm, Z: 35 mm, R: 10° This is the top left corner of the area to be brushed.
0007	Line End (90, 60, 35, 60)	Registers a Line End point at X:90 mm, Y:60 mm, Z: 35 mm, R: 60° This is the lower right corner of the area to be brushed.
0008	End Program	Ends the program. Returns the tip to the home position.

3 Step & Repeat – Sample Program

The program below will dispense four dots on each work piece.

There are four rows and three columns of parts loaded on the robot for a total of 12 parts.

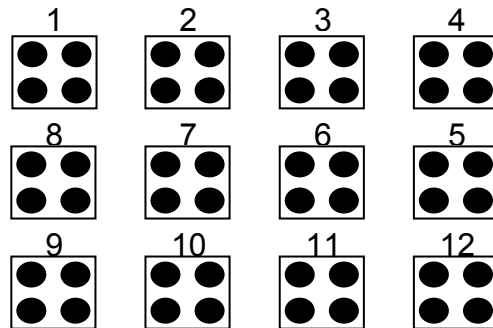

The parts are 25 mm apart in the X axis.

The parts are 30 mm apart in the Y axis.

Addr.	Command	Notes
0001	Point Dispense Setup - Dispense Time: 0.50 sec - Tail Time: 0.25 sec	Sets the dispensing time for all dots to 0.5 seconds. Sets the waiting time, after dispensing a dot, to 0.25 seconds.
0002	Dispense End Setup - H.Speed: 75 mm/sec - L.Speed: 15 mm/sec - L.Length: 10 mm	Programs the robot to rise, after dispensing. The tip will rise 10 mm (L.Length) at 15 mm/sec (L.Speed) then continue rising at 75 mm/sec (H.Speed) to the Z Clearance height.
0003	Z Clearance - 20 mm - Relative	Sets the Z Clearance value to 20 mm relative to the point location. The maximum height the tip will rise after dispensing is 20 mm above the Dot
0004	Dispense Dot (180, 20, 35, 10)	Dispenses a dot at X: 180 mm, Y: 20 mm, Z: 35 mm, R: 10° (First Part, first dot)
0005	Dispense Dot (180, 25, 35, 15)	Dispenses a dot at X: 180 mm, Y: 25 mm, Z: 35 mm, R: 15° (First Part, second dot)
0006	Dispense Dot (185, 20, 35, 20)	Dispenses a dot at X: 185 mm, Y: 20 mm, Z: 35 mm, R: 20° (First Part, third dot)

<i>Addr.</i>	<i>Command</i>	<i>Notes</i>
0007	Dispense Dot (185, 25, 35, 25)	Dispenses a dot at X: 185 mm, Y: 25 mm, Z: 35 mm, R: 25° (First Part, four dot)
0008	Step & Repeat Y - Columns: 4 - Rows: 3 - X Offset: 25 mm - Y Offset: 30 mm - Start Address: 4 - 'S' Path	Registers the Step & Repeat instruction. The robot will repeat addresses 0004 – 0007 to complete a matrix of 4x3 (12) parts. The distance between parts is 25 mm in the X axis and 30 mm in the Y axis. The robot will follow an 'S' Path, through the parts.
0009	End Program	Ends the program. Returns the tip to the home position.

4 Input / Output Signal Processing – Sample Program

The program below assumes a fixture holding 12 parts. The robot will move to the first part, then close output signal # 1 for 0.25 seconds.

The robot will then check the status of input signal #1 at the first part.

If the signal is closed, the robot will dispense a dot then move to the next part.

If the signal does not close with (2) seconds, the robot will skip this part and move to the next part. This process will be repeated for all (12) parts.

Addr.	Command	Notes
0001	Point Dispense Setup - Dispense Time: 0.50 sec - Tail Time: 0.25 sec	Sets the dispensing time for all dots to 0.5 seconds. Sets the waiting time, after dispensing a dot, to 0.25 seconds.
0002	Dispense End Setup - H.Speed: 75 mm/sec - L.Speed: 15 mm/sec - L.Length: 10 mm	Programs the robot to rise, after dispensing. The tip will rise 10 mm (L.Length) at 15 mm/sec (L.Speed) then continue rising at 75 mm/sec (H.Speed) to the Z Clearance height.
0003	Z Clearance - 20 mm - Relative	Sets the Z Clearance value to 20 mm relative to the point location. The maximum height the tip will rise after dispensing is 20 mm above the Dot
0004	Dummy Point (180, 20, 25, 30)	Registers a 'Dummy' point at: X: 180 mm, Y: 20 mm, Z: 25 mm, R: 30° The tip will move to this XYZ location, but do nothing. This point is just above the first part in the fixture.
0005	Set INPUT / OUTPUT - Output - Port #: 1 - Status: 1	Closes output signal # 1. Output is turned 'on.'
0006	Wait Point - Time: 0.25 sec	Wait for 0.25 seconds

Addr.	Command	Notes
0007	Set INPUT / OUTPUT - Output - Port #: 1 - Status: 0	Open output signal # 1. Output is turned 'off.'
0008	Set INPUT / OUTPUT - Input - Port #: 1 - Status: 0 - GOTO Address: 12	Check the status of input signal # 1. If the input signal is closed (pin #26 is connected to ground / pin 50), the robot will go to address #0012. If input signal #1 is open (pin #26 is not connected to ground), the program will continue at address #0009
0009	Wait Point - Time: 0.20 seconds	Wait for 0.20 seconds
0010	LOOP ADDRESS - Count: 10 - Address: 8	Repeat instructions 0008 – 0009 (10) times. (10) times a wait time of 0.20 seconds = 2.00 seconds.
0011	GOTO Address: 0013	If, after 2.0 seconds, the input signal never closed, goto address #0013 (Skip the dot dispensing).
0012	Dispense Dot (180,20,35, 90)	Dispenses a dot at X: 180 mm, Y: 20 mm, Z: 35 mm, R: 90° (dot on the first part in the fixture)
0013	Step & Repeat Y - Columns: 4 - Rows: 3 - X Offset: 25 mm - Y Offset: 30 mm - Start Address: 4 - 'S' Path	Registers the Step & Repeat instruction. The robot will repeat addresses 0004 – 0011 to complete a matrix of 4x3 (12) parts. The distance between parts is 25 mm in the X axis and 30 mm in the Y axis. The robot will follow an 'S' Path, through the parts.
0014	End Program	Ends the program. Returns the tip to the home position.

SECTION 7: Error Messages and Specifications

1 Error Messages

1.1 Point Closed Error

This message occurs when two adjacent line or arc points are registered at exactly the same XYZ location and R position of tip.

Do not register two line points, one after the other, at exactly the same XYZ location and R position of tip.

1.2 Need Line Start Point

An attempt was made to register a Line Passing point, an Arc point or a Line End point without first registering a Line Start point.

Register a Line Start point before registering a Line Passing point, an Arc point or a Line End point.

1.3 Need Step & Repeat

The Expand Step & Repeat command was given but there is no Step & Repeat instruction currently in the display. Move to the Step & Repeat function you want to expand before selecting Expand Step & Repeat.

1.4 Unlock Program

An attempt was made to edit a program in Teach mode which is locked. The program can not be edited until it is unlocked. Unlock the program in **Menu 1, Utility Menu, Lock Program**.

1.5 Address Over Memory

An attempt was made to copy data but the copy would exceed the maximum memory address.

1.6 Move Over Memory

An attempt was made to move data but the move would exceed the maximum memory address

1.7 System Error

This message indicates a problem with the CF Memory card. Please contact your dealer.

NOTE:


When an error occurs, the Teach Pendant screen displays it. If the Teach Pendant is not connected to the robot, turn the power OFF and connect it. When the power is turned on again, the screen will display the error.

2 I/O Specifications

2.1 Ext. Control Connector:

The pin assignments for the external control connector are as follows:

Pin #	Description
1	Start Signal
2	Start Signal
3	Door Switch (COM)
4	Door Switch (NC)
5	Door Switch (NO)
6	Emergency Stop
7	Emergency Stop

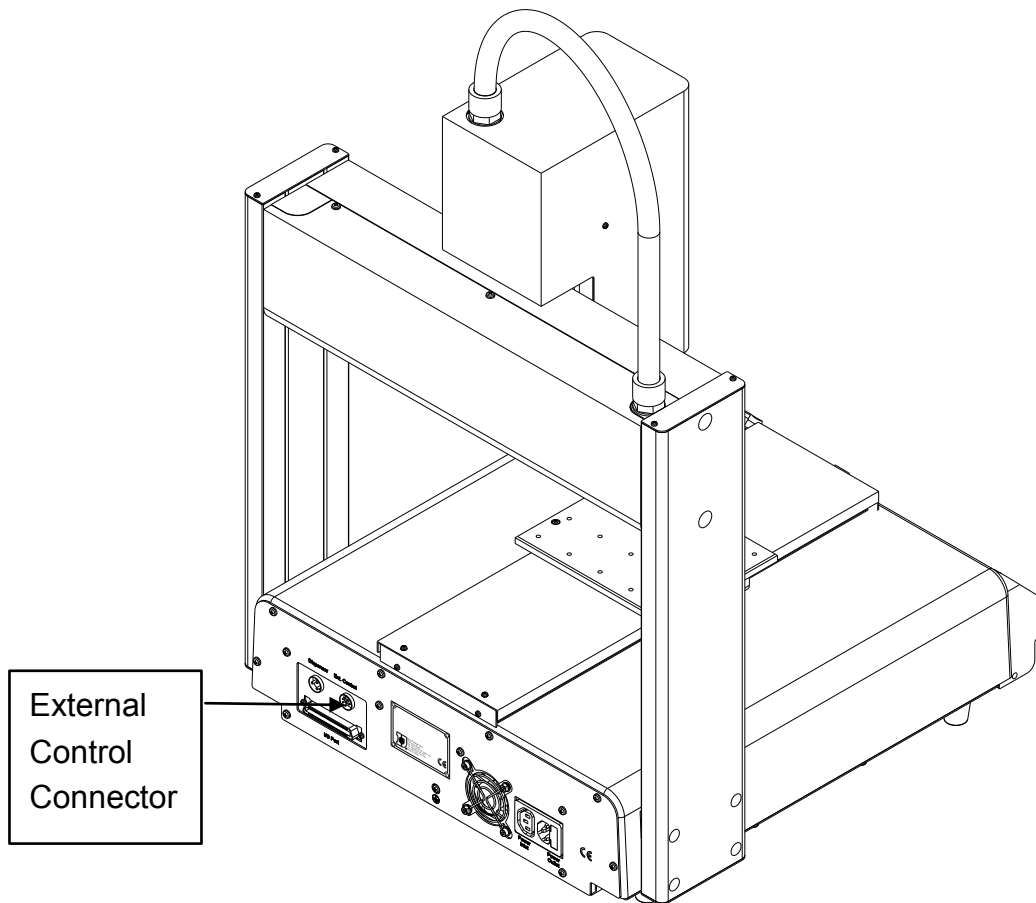

2.2 Output Signals

Pin #	Description
1	OUT #1
2	OUT #2
3	OUT #3
4	OUT #4
5	OUT #5
6	OUT #6
7	OUT #7
8	OUT #8
9	Reserved
10	Reserved
11	Reserved
12	+12V
13	+12V
14	+12V
15	+12V
16	+12V
17	+12V
18	+12V
19	+12V
20	+12V
21	+12V
22	+12V
23	+12V
24	+12V
25	+12V

Output Type: Photo-coupler

Output Power:


- F7304N / F7404N output signals are able to provide a maximum of 12 volts.
- F7304N / F7404N output signals are able to provide a maximum of 250 milliamps per pin.

Function:

- When the output signal is closed, the circuit between the output pin (pin # 1 - #9) and the +12 Volt power supply (pin # 12 - #25) is closed.
- The output pin (pin #1 - #9) is connected to the power supply GROUND.
- Pins #12 - #25 are all the same. They are all connected to the +12 volt power supply.

IMPORTANT NOTES:

1. Output signals should be used only to drive external relays. Do not power external devices directly through output signals. Electrical noise will damage the output signal relay.
2. If an inductive load (such as a relay) is connected to an output signal, be sure to install a diode as shown to prevent damage to the output photocoupler:

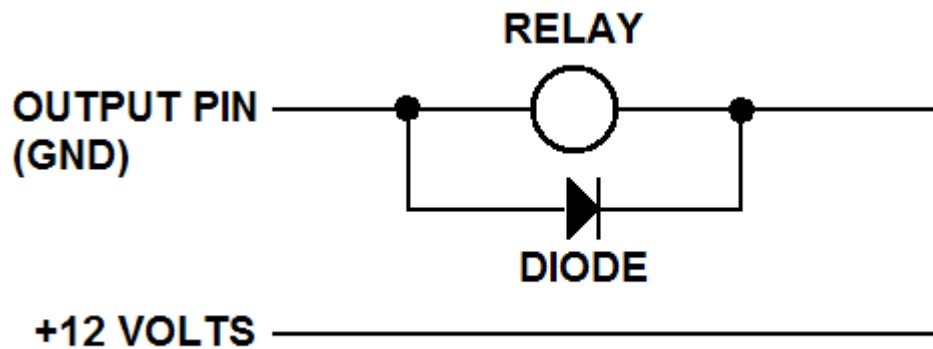

2.3 Input Signals

Pin #	Description
26	IN # 1
27	IN # 2
28	IN # 3
29	IN # 4
30	IN # 5
31	IN # 6
32	IN # 7
33	IN # 8
34	COM
35	COM
36	COM
37	COM
38	COM
39	COM
40	COM
41	COM
42	COM
43	COM
44	COM
45	COM
46	COM
47	COM
48	COM
49	COM
50	COM


Notes:

To close an input signal, short the circuit between the input pin (26 – 33) and a COM / ground pin (ANY pin # 34 - pin 50).

Input signals are powered by the robot internal power supply: 5 volts, maximum 2.5 mA

Check the status of an input signal using the SET I/O command (see **SECTION 5:1.16 - Set I/O**). When the input pin (pin 26 – 33) is connected to a COM pin (pin #34 - #50), the value of the input is 0.

2.4 Input / Output Schematic

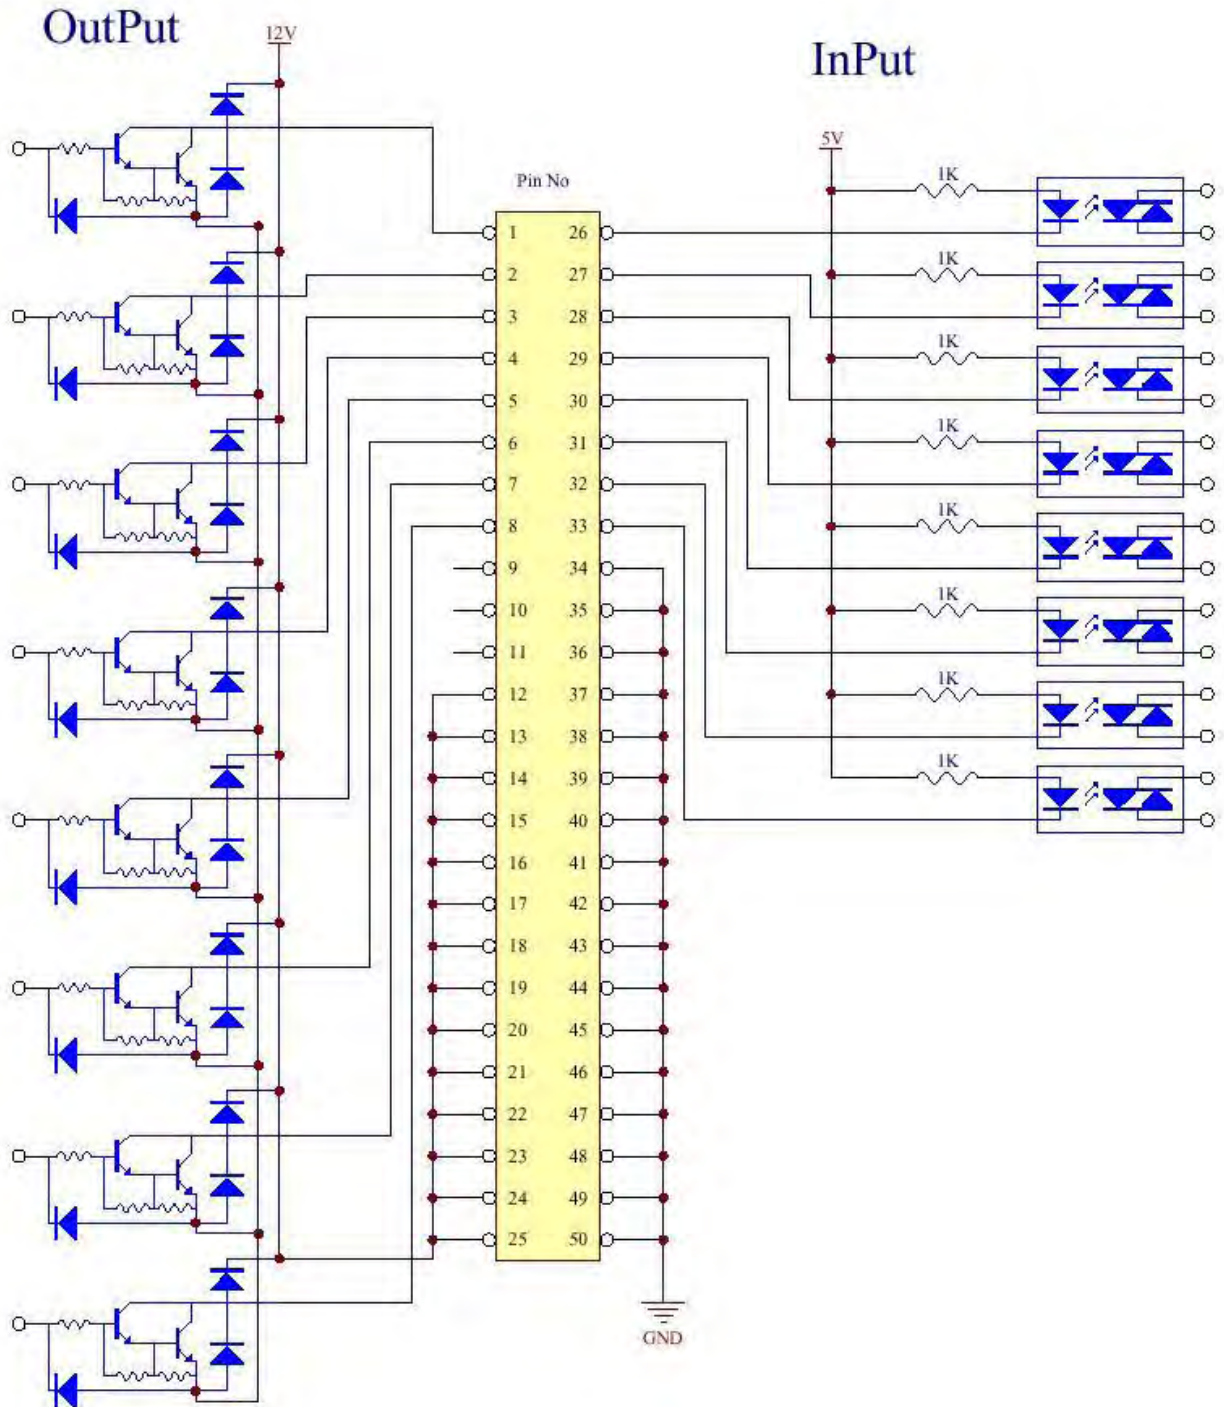

2.5 Input / Output Power Specifications

F7304N / F7404N		
	Inputs (Internal Power Supply)	Outputs (Internal Power Supply)
MAXIMUM Voltage	5 VDC	12 VDC
MAXIMUM Current	2.5 mA	250 mA

3 System Specifications

	F7304N	F7404N
Working Area X / Y / Z (mm)	300 / 300 / 100	400 / 400 / 100
Load Worktable / Tool	11.0kg / 6.0kg	11.0kg / 6.0kg
Maximum Speed X&Y / Z (mm/sec)	800 / 320	800 / 320
Maximum Speed R (deg/sec)	720	720
Repeatability	+/- 0.02mm/ Axis	+/- 0.02mm/ Axis
Resolution	0.01mm/Axis	0.01mm/Axis
Data Memory capacity	4000 points/program 100 programs	4000 points/program 100 programs
Program system	Compact Flash Card/PC Storage/USB	Compact Flash Card/PC Storage/USB
Processor	32 Bit	32 Bit
Display	Teach Pendant LCD	Teach Pendant LCD
Drive System / Stepping Motor	5-Phase	5-Phase
Motion Control	PTP & CP	PTP & CP
Linear / Circular Interpolation	4 axes	4 axes
Teaching Method	Teach Pendant	Teach Pendant
I/O Signals	8 Inputs / 8 Outputs	8 Inputs / 8 Outputs
External Interface	RS232	RS232
Power Supply	Auto-switching: AC95-132V 300W AC180-250V 300W	Auto-switching: AC95-132V 300W AC180-250V 300W
Working Temperature	0 – 40 °C	0 – 40 °C
Relative Humidity (no condensation)	20 – 90%	20 – 90%
Dimensions (WxDxH) (mm)	545 x 554 x 900	635 x 644 x 900
Weight	39.5 kg	46 kg

SECTION 8: Maintenance and Periodic Inspection

1 Check Cycles and Methods

1.1 General Consideration

It is essential to correctly and periodically inspect and maintain the robot to prevent unexpected failures or malfunctions, thus ensuring safe operation and lengthening the machine's life.

The outside parts of the machine should be kept clean. Use vacuum cleaner or soft cloth to clean the machine. Do not use compressed air or chemical products to clean the machine, as they can damage the internal cables, timing belts and other components of the unit.

Use only the greasing materials recommended by the manufacturer of the machine.

1.2 Check Cycles and Points

The check cycles of the machine are classified in the following categories:

- Daily check
- Weekly check
- Check after 3 months of operation
- Check after 3 years of operation

These cycles are based on a daily 8 hours of operation.

The check points are as follows:

CHECK POINT	CHECK CYCLE			
	Daily	Weekly	Every 3 months	Every 3 years
Tilt or deviation of machine	X			
Status of cables and hoses	X			
Appearance	X			
Stability on the work bench	X			
Motor running condition		X		
Motions, connections and joints			X	
Unfastened / loose bolts and screws			X	
Internal wires and connectors			X	
Accuracy and precision			X	
Ball screw assembly, LM guide, slide guide			X	
Overhaul				X

1.3 Check Methods

Check point	Check action (See if)	Corrective action
Tilt or deviation of machine	<ul style="list-style-type: none"> • Robot working position is tilted or inclined 	<ul style="list-style-type: none"> • Set the machine in a proper vertical position
Status of cables and hoses	<ul style="list-style-type: none"> • Electrical cables and pneumatic hoses are excessively twisted, bent, or squeezed • Air leakage between pneumatic hoses and fittings 	<ul style="list-style-type: none"> • Remove the causes of twisting, bending, or squeezing • Cut away the damaged parts of hoses and make connections
Appearance	<ul style="list-style-type: none"> • Damage on the robot's head from clashes during operation 	<ul style="list-style-type: none"> • Pay attention to working area of robot and remove any obstacle
Stability on work bench	<ul style="list-style-type: none"> • The robot is too close to the edge of the work table 	<ul style="list-style-type: none"> • Rearrange the position of the robot on the table • Remove sources causing table vibration
Motor running condition	<ul style="list-style-type: none"> • Infiltration of grease • Performance degradation due to overload 	<ul style="list-style-type: none"> • Replace motor (see agent)
Motions, connections, and joints	<ul style="list-style-type: none"> • The axes are not moving smoothly • Noises, vibrations, and / or shakes 	<ul style="list-style-type: none"> • Grease up • Reset and adjust gains (contact agent for setting)
Unfastened / loose bolts and screws	<ul style="list-style-type: none"> • Loose or broken bolts and nuts 	<ul style="list-style-type: none"> • Tighten loose bolts and nuts. Take corrective action to remove the cause
Internal wires and connectors	<ul style="list-style-type: none"> • Stripped or damaged external cover or shield on cable and/or connectors 	<ul style="list-style-type: none"> • Replace the damaged cables or connectors with new ones (see agent)
Accuracy and precision	<ul style="list-style-type: none"> • Z runout over X or Y larger than 0.2mm • Wear on timing belt 	<ul style="list-style-type: none"> • Contact agent • Replace timing belt (see agent)
Ball screw (worm) assembly, LM guide, slide guide	<ul style="list-style-type: none"> • Lack of grease on shaft, LM guide and / or slide guide surfaces • Deflection of the shaft 	<ul style="list-style-type: none"> • Apply grease on grease-hole of worm, LM guide, and slide guide surfaces (see section 9:2) • Replace the shaft (contact agent)
Overhaul	<ul style="list-style-type: none"> • Diagnose the whole system and make decision for the overhaul 	<ul style="list-style-type: none"> • Contact agent

2 Greasing Procedure




2.1 Grease Type and Greasing Interval

- Grease type: 30 – 100 centistokes (recommended: THK AFA 70G)
- Greasing periods: every 6 months

2.2 Accessing Parts to be Greased

1. Unscrew the bolts shown with arrows in the following pictures and remove the covers.
2. Apply grease into the grease hole of ball screw (worm) and also thinly to the surfaces of LM guide and slide guide.
3. Put back the covers and screw in the bolts.




F7304N
 X-axis

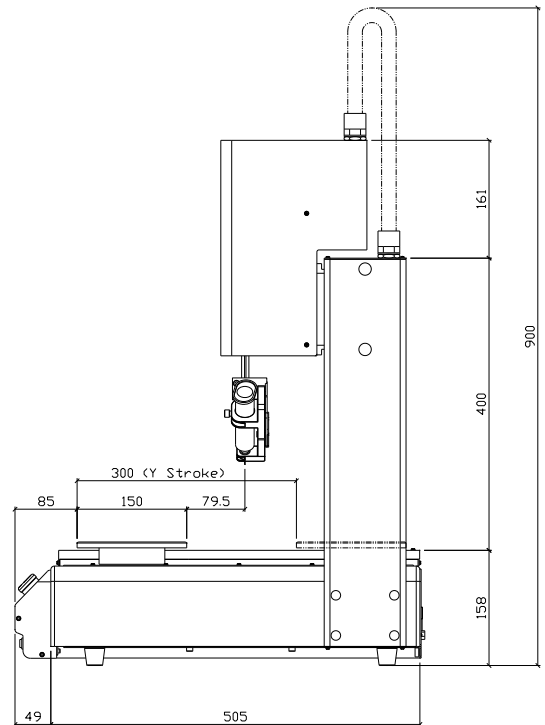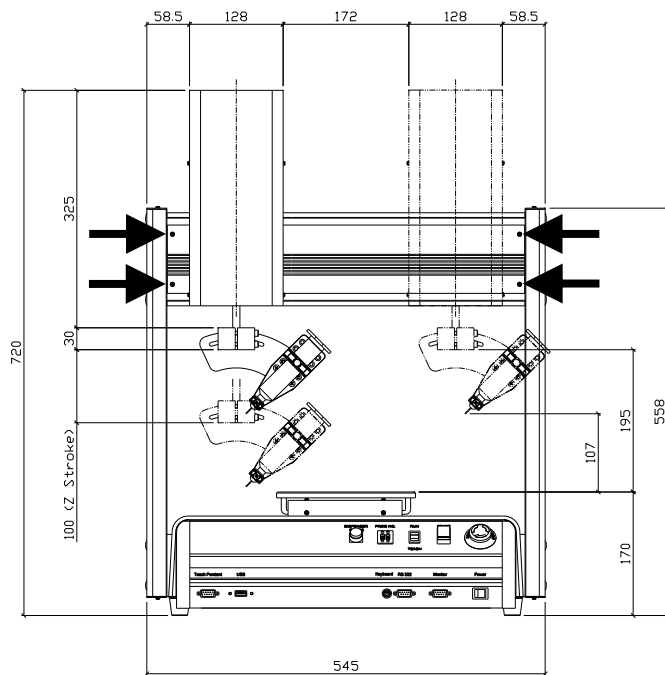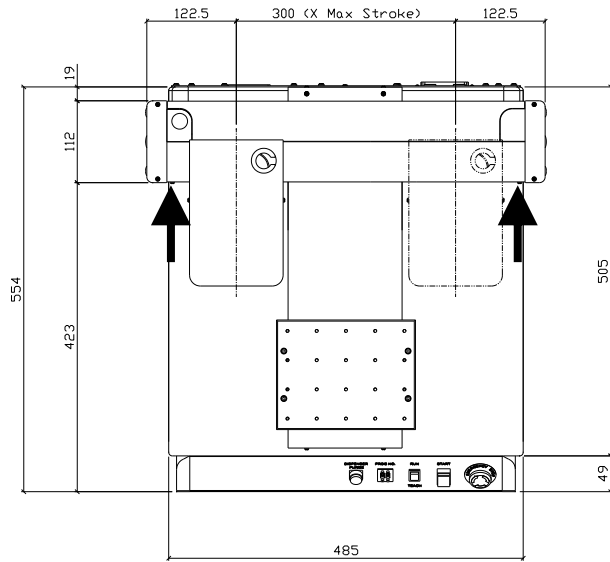

NOTE: Screws are indicated by arrows. → ↑

F7304N




Y-axis

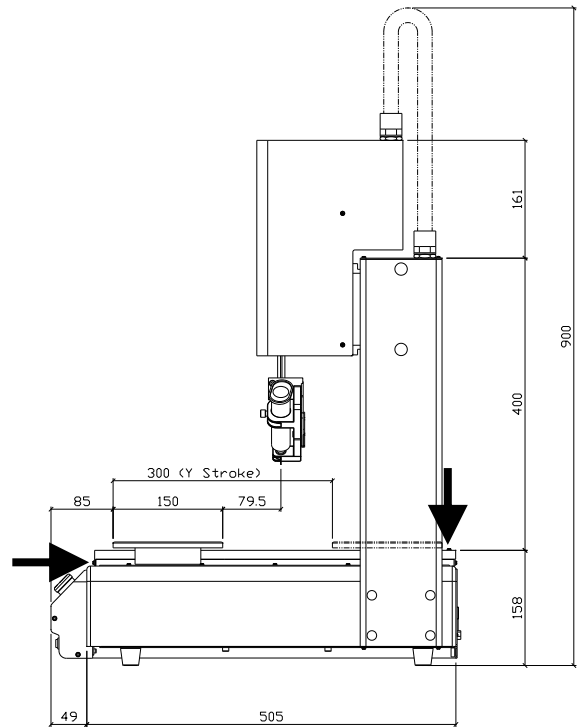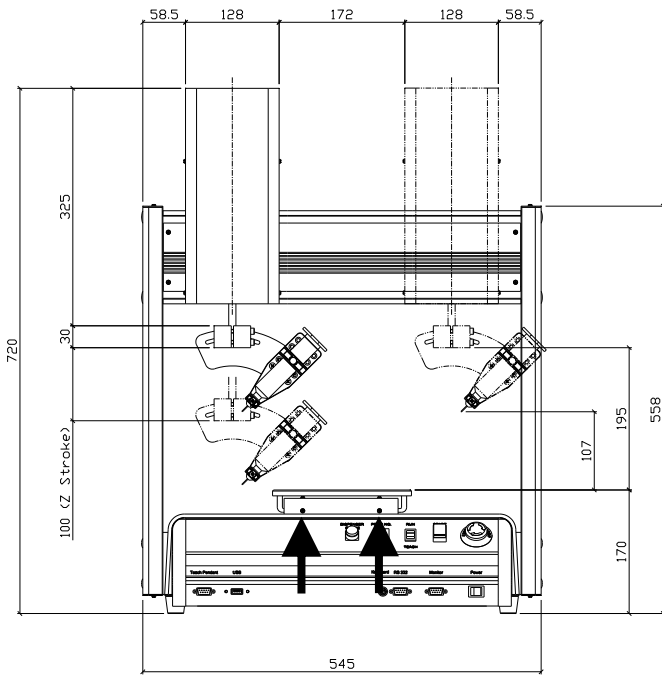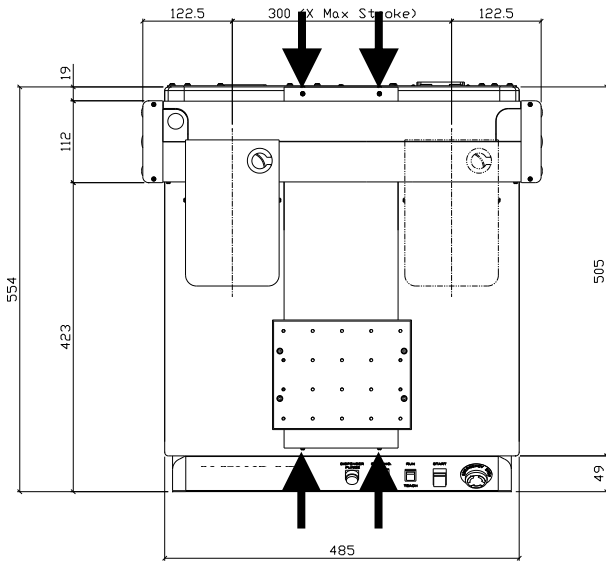


NOTE: Screws are indicated by arrows. → ↑

F7304N




Z-axis and R-axis

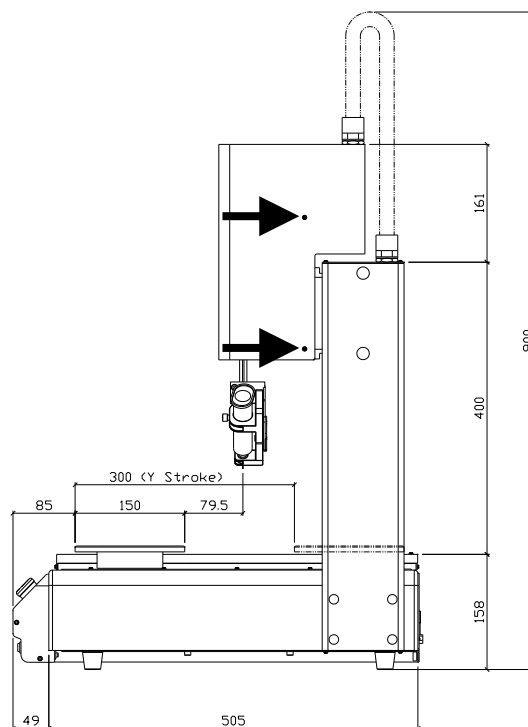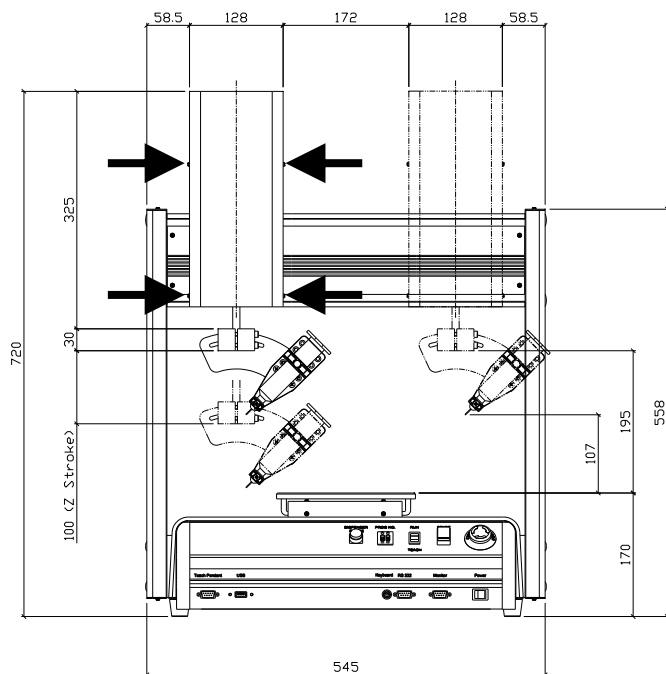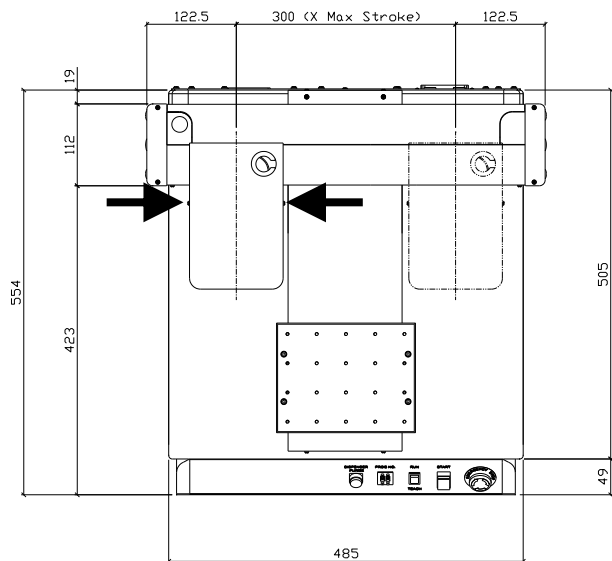

NOTE: Screws are indicated by arrows.



 


F7404N
 X-axis

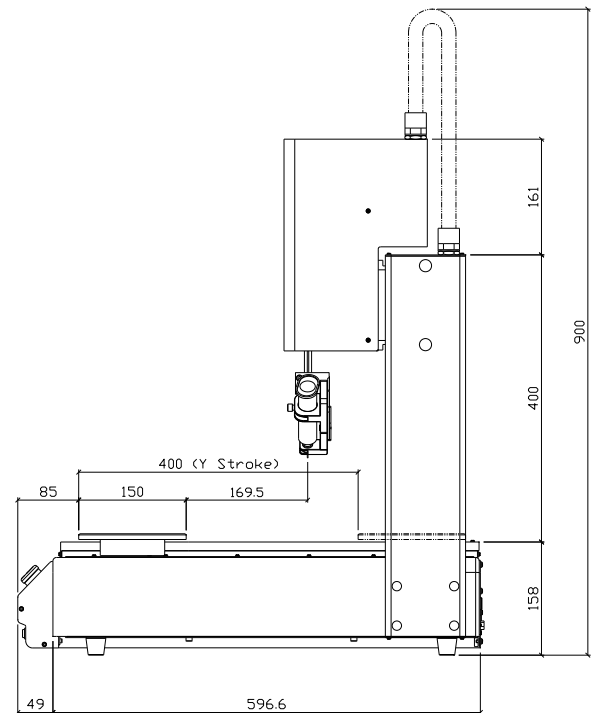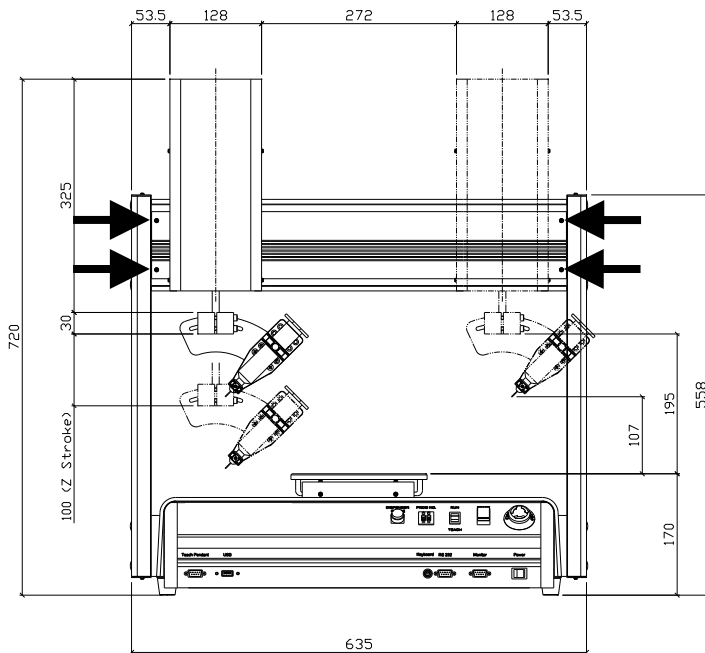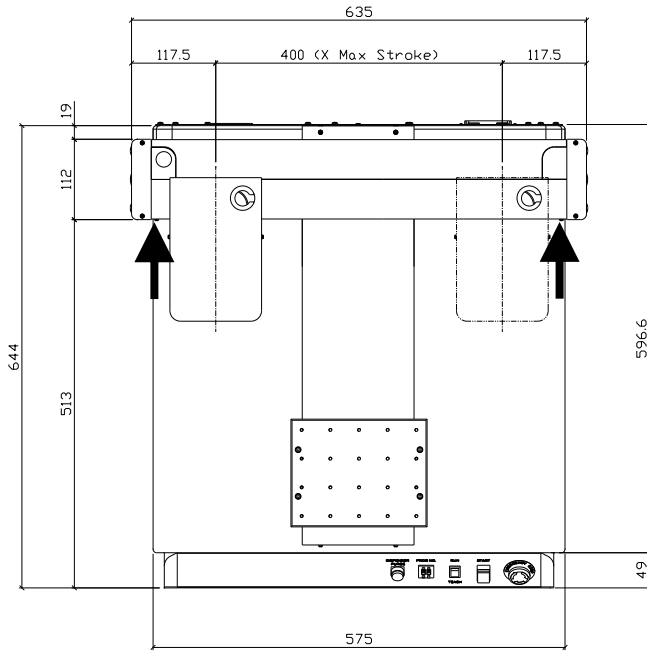

NOTE: Screws are indicated by arrows. → ↑




F7404N
 Y-axis

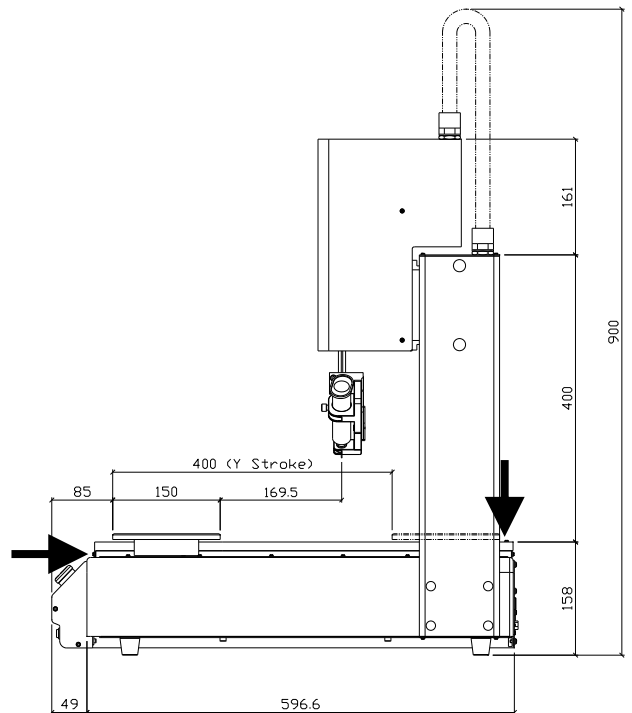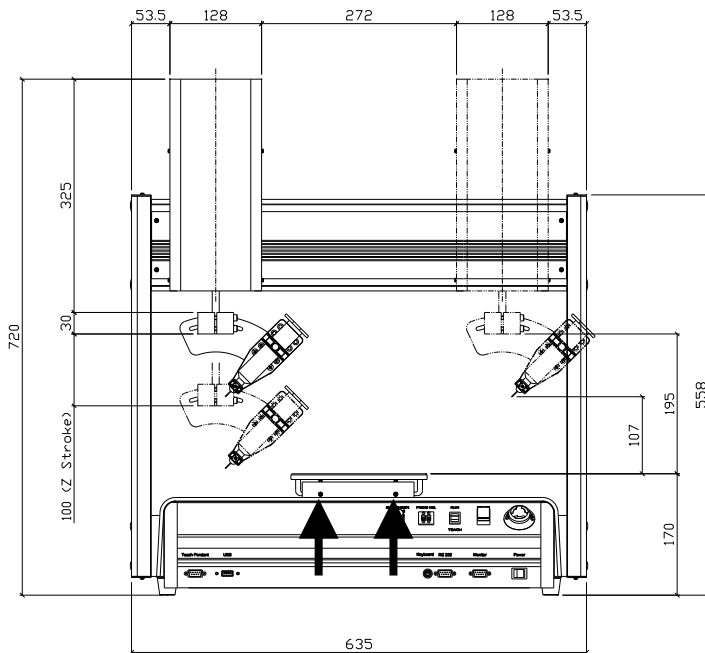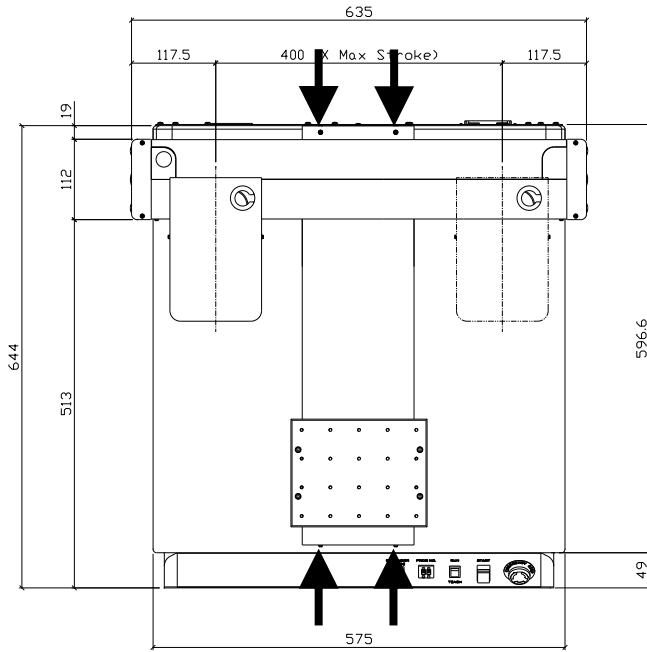

NOTE: Screws are indicated by arrows. → ↑

F7404N

Z-axis and R-axis

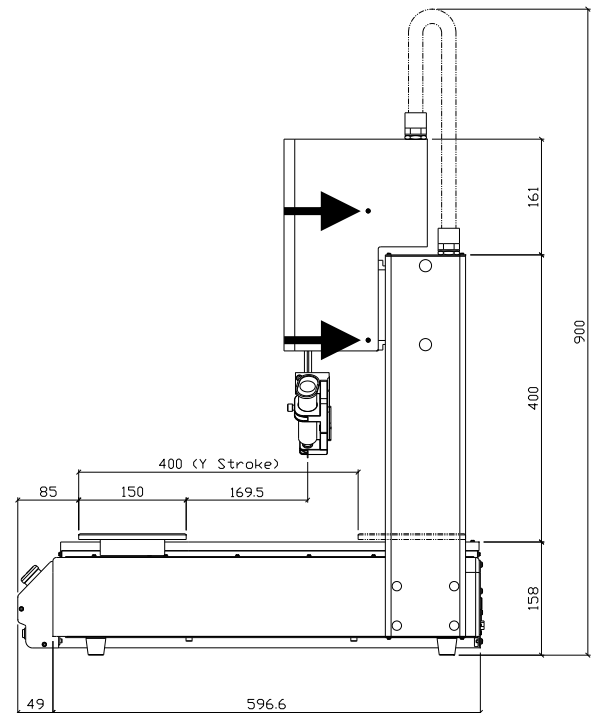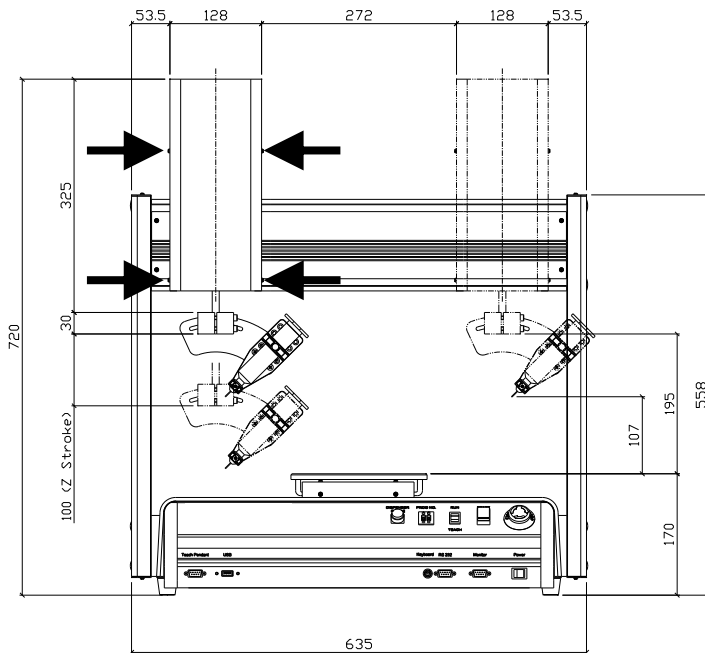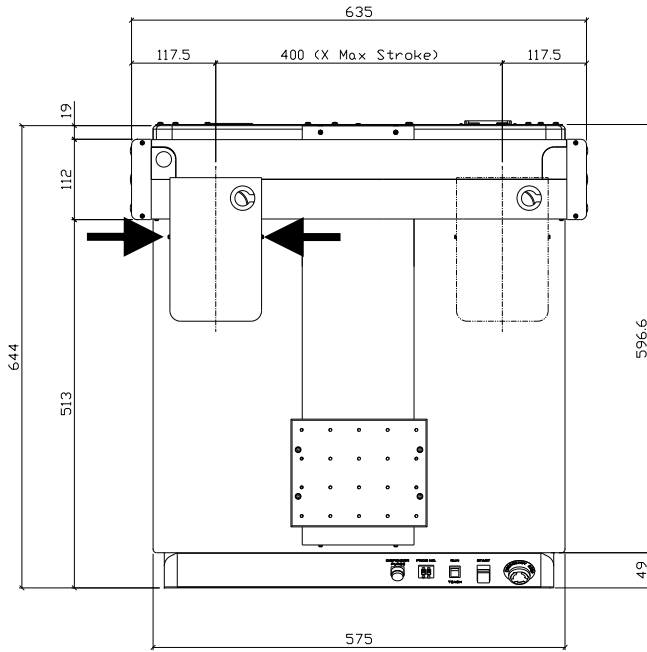

NOTE: Screws are indicated by arrows. → ↑

3 Parts That Could Require Frequent Replacement

F7304N

<u>Description</u>	<u>Part number</u>	<u>Quantity</u>
X-axis timing belt	0603-20309001	1
Y-axis timing belt	0603-20309001	1
Z-axis timing belt	0701-20309002	1
R-axis timing belt	0701-20309001	1

F7404N

<u>Description</u>	<u>Part number</u>	<u>Quantity</u>
X-axis timing belt	0603-30309002	1
Y-axis timing belt	0603-30309001	1
Z-axis timing belt	0701-20309002	1
R-axis timing belt	0701-20309001	1

This page intentionally left blank.



15 Corporate Drive, Suite E - Wayne - NJ 07470
Tel: (973) 646-5044 E-mail: info@fisnar.com
www.fisnar.com

