 


## Using the Flow-Seal Valve

- 1** If product tends to separate, shake vigorously at least 30 seconds.



- 2** Hold the unit at a slight angle, tip on firm surface; gently depress tip. A gentle pumping action will speed activation. Valve is primed when product reaches the end of the top.

 
**NOTE:** The more viscous the product, the longer it will take to prime. In general priming takes between 20 to 90 Seconds.




- 3** When more product is needed during use, depress tip gently and product will flow immediately.



- 4** After use, replace hood and twist downward for air tight seal.



 - 5** Tips may be removed for replacement or cleaning.





## Filling the Flow-Seal Valve

### 1 **Bottle Type**

With cap on the valve screw the valve onto the filled bottle

### **Tube Type**

With cap on insert the valve into the filled tube then tap the valve until shoulder of the closure is flush against the tube. We suggest using a rubber mallet to avoid damage to the tube.

2 To release air pressure or purge the filled unit. Hold in upright position; remove cap and depress tip approximately 2 seconds.