

**VPP803-LF
VACUUM PICK-UP SYSTEM**

OPERATING MANUAL




15 Corporate Drive, Suite E - Wayne - NJ 07470
Tel: (973) 646-5044 E-mail: info@fisnar.com
www.fisnar.com

This page is intentionally left blank.

SPECIFICATIONS

- Size: 3.75" x 7.50" x 2.62"
(9.52 x 19.05 x 6.65cm)
- Cycle: Continuous
- Air input: 20 to 100 psi (1.33 to 7 bar)
- Vacuum: Up to 16 in. hg
- Weight: 12 ounces (341 gm)

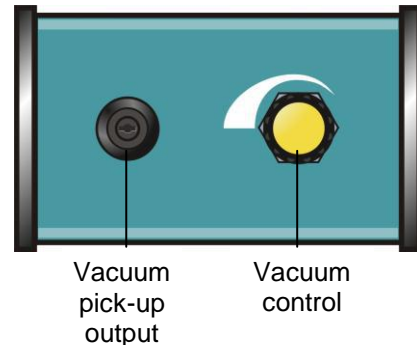

SETTING UP AND OPERATING INSTRUCTIONS

- To assemble insert the airline tubing into the connector, insert the end of the tubing into the "PUSH-IN" type connector until it bottoms.
- Connect the air hose to filtered compressed air. Adjust the filter regulator to 100psi (7 bar).
- Insert the male quick connect from the vacuum pick-up pencil into the vacuum pick-up output in the front of the VPP803-LF. Turn to the right to "lock".
- Assemble the appropriate vacuum tip and cup.
- To create vacuum through the pick-up pencil, place your finger over the hole on the side of the pencil. To stop the vacuum, remove your finger from the hole.
- The knob on the front of the VPP803-LF controls the amount of vacuum. To increase vacuum, turn vacuum pick-up control knob clockwise. To decrease vacuum, turn vacuum pick-up control knob clockwise.
- To disassemble the airline tubing from connector, depress the release ring against fitting and in the same time pull out the tubing.

LIMITED WARRANTY

Manufacturer warrants this product to the original purchaser for a period of two (2) years from the date of purchase to be free from defects in material and workmanship, but not against damages caused by misuse, negligence, accident, faulty installation, abrasion, corrosion or by not operating in accordance with factory recommendations and instructions. Manufacturer will repair or replace (at factory's option), free of charge, any component of the equipment thus found to be defective, upon prepaid return of the equipment to the factory during the warranty period of the equipment. In no event shall any liability or obligation of Manufacturer arising from this warranty exceed the purchase price of the equipment. This warranty is valid only when 5 micron filtered air is used. The manufacturer's written liability, as stated herein, cannot be altered or enlarged except by a written statement signed by an officer of the company. In no event shall manufacturer be liable for consequential or incidental damages. A return authorization is required from FISNAR INC. prior to shipping a defective unit to the factory.

Manufacturer reserves the right to make engineering or product modifications without notice.



15 Corporate Drive, Suite E - Wayne - NJ 07470
Tel: (973) 646-5044 E-mail: info@fisnar.com
www.fisnar.com

